

Fig.9



Fig.10



Fig.11



Fig.12



- **When cleaning the stainless steel paper towel dispenser and bin fascia,** check for dirt and grease and wipe clean as directed in the 'Care of finishes' section.
- **When refilling the paper towel dispenser,** lift and pull front fascia forward (fig.10) and fill from the top (Fig. 11).
- **When emptying the bin,** remove the bin receptacle by lifting from the panel casing and deposit as necessary (Fig. 12).

weekly checks

- **If the bin has become loose** check that the fixings are tight and that there is no movement on the bin. If the items are loose, please tighten the relevant fixings (Fig.9).

monthly checks



Satin Stainless Steel

Wipe clean with a medium strength detergent or white spirit using a soft cloth or sponge. Rinse and dry with a dry soft cloth. In the event of dirt having accumulated through neglect, application of aerosol lubricant prior to standard cleaning is recommended. A harsh brush should never be used.

Finish prefixes: SS • ST

Polished Stainless Steel

Wipe clean with a medium strength detergent or white spirit using a soft cloth or sponge. Rinse and dry with a dry soft cloth. In the event of dirt having accumulated through neglect, application of aerosol lubricant prior to standard cleaning is recommended. A harsh brush should never be used.

Finish prefixes: PS • SP