 


AURA[®] THRESHOLD PLATE

FITTING GUIDE 4505

AAS4505

LENGTH:



CONTENTS

- Aluminium threshold
- Reversible tread strips
- Bag of screws and plugs
- Acoustic bedding pads affixed
- Fitting guide

TOOLS REQUIRED

- Tape measure
- Pencil or marker
- Saw (power/hack)
- Power drill
- 6mm masonry drill

For more information please call:

+44 (0)1626 834252

All rights reserved. No part of this fitting guide may be reproduced, stored in a retrieval system, or transmitted in any means, electronic, mechanical, photocopying, recording or otherwise without the written permission of Lorient Polyproducts Limited. © Lorient Polyproducts Ltd 2013

www.lorientgroup.com
+44 (0)1626 834252

Lorient Polyproducts Ltd
Endavour House
Fairfax Road
Heathfield Ind Estate
Newton Abbot
Devon TQ12 6UD
United Kingdom

LORIENT

**AAS4505
THRESHOLD
PLATE**

17/06/18

INSTALLATION DETAIL

It is not necessary to remove the door from its hinges.

STEP 1

Remove the plate from the packaging and measure the door width, between jambs or door stops to determine the plate length required.

STEP 2

Measure the threshold plate and mark the desired length (and profile if cutting around door stop) with a pencil.

STEP 3

Pull back tread strips and cut the threshold plate to length using a saw.

STEP 4

Position the plate on the door sill in required location.

STEP 5

With threshold plate in position, using the pre-drilled countersunk holes, mark hole centres on floor.

Set the plate to one side and using masonry drill, create fixing holes and insert plugs. Clean away dust.

Screw fix the threshold plate in place using screws supplied.

Note for exterior applications:

Where threshold plate meets the door stop, sealant should be applied to prevent water ingress.

STEP 6

Check to ensure the door opens and closes freely.

NOTE

For effective operation, the AAS4504, AAS4505, ASS4506, AAS4507 threshold plates require a minimum of 8mm clearance between the door and the floor.

IMPORTANT

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the adjustment of the door seal periodically to ensure the door assembly to which it is fitted, closes & latches properly.

DISCLAIMER

Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers. Lorient reserves the right to make alterations or delete installation detail without prior notice.



Positive pressure tested gasketing materials for fire doors for application to hollow-metal-type fire doors rated up to 3 hours & wood-type fire doors rated up to 1-1.5 hours.

CATEGORY J – Doors – gasketing that has been tested on a positive pressure fire door & frame but is not required for the door to obtain its fire rating. Category J gasketing does not negatively affect the rating on a positive pressure door.