 


# AURA<sup>®</sup> THRESHOLD PLATE

## FITTING GUIDE **4508**

### AAS4508

LENGTH:



#### CONTENTS

- Aluminium threshold plate
- Silicone gasket
- Bag of screws and plugs
- Reversible tread strips
- Acoustic bedding pads affixed
- Fitting guide

#### TOOLS REQUIRED

- Tape measure
- Pencil or marker
- Saw (power/hack)
- Power drill
- 6mm masonry drill

For more information please call:

**+44 (0)1626 834252**

All rights reserved. No part of this fitting guide may be reproduced, stored in a retrieval system, or transmitted in any means, electronic, mechanical, photocopying, recording or otherwise without the written permission of Lorient Polyproducts Limited. © Lorient Polyproducts Ltd 2013

www.lorientgroup.com  
+44 (0)1626 834252

United Kingdom  
Devon TQ12 6UD  
Newton Abbot  
Heathfield Ind Estate  
Fairfax Road  
Endeavour House  
Lorient Polyproducts Ltd

**LORIENT**

**AAS4508  
THRESHOLD  
PLATE**

11/06/13

## INSTALLATION DETAIL

It is not necessary to remove the door from its hinges.

### STEP 1

Remove the plate from the packaging and measure the door width, between jambs or door stops to determine the plate length required.

### STEP 2

Measure the threshold and mark with a pencil the desired length (and profile if cutting around the door stop).

### STEP 3

Pull back the tread strips and silicone gasket and cut the threshold plate to length using a saw. Replace the silicone gasket and trim to length with a knife.

### STEP 4

Position the plate on the door sill in required location (ensuring the bottom edge of the door is butted up against the silicone gasket).

#### Screw Fix

Using the pre-drilled countersunk holes, with threshold plate in position, mark hole centres on floor.

Set the plate to one side and using masonry drill, create fixing holes and insert plugs. Clean away dust.

### STEP 5

#### Screw Fix

Screw fix the threshold plate in place using screws supplied. Replace reversible tread strips.

Clean away dust and replace the tread strips to conceal fixings.

### STEP 6

Where the threshold plate meets the door stop, sealant may be applied to prevent ingress of moisture.

### STEP 7

Check to ensure the door can open and close without the need for excessive force.

### NOTE

For effective operation, the AAS4508 threshold plate requires a minimum of 9mm clearance between the door and the floor.

### IMPORTANT

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the adjustment of the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.

### DISCLAIMER

Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete installation detail without prior notice.