





Assembly Instructions for A-Max Noticeboards

WALL MOUNTED

3-point fixing

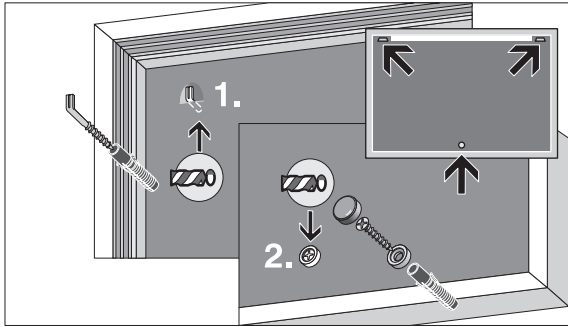

4-point fixing

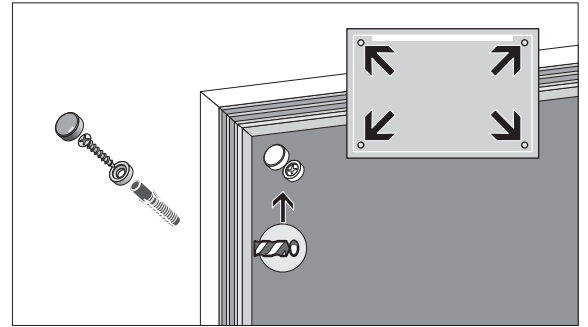

FREESTANDING





Showcase has to lay flat on a flat surface while mounted to the posts.

80 x 40mm rectangular posts


80mm circular posts

100 x 60mm rectangular posts

**Decorative 76mm circular posts
with Gothic Finial, Base & Collar**

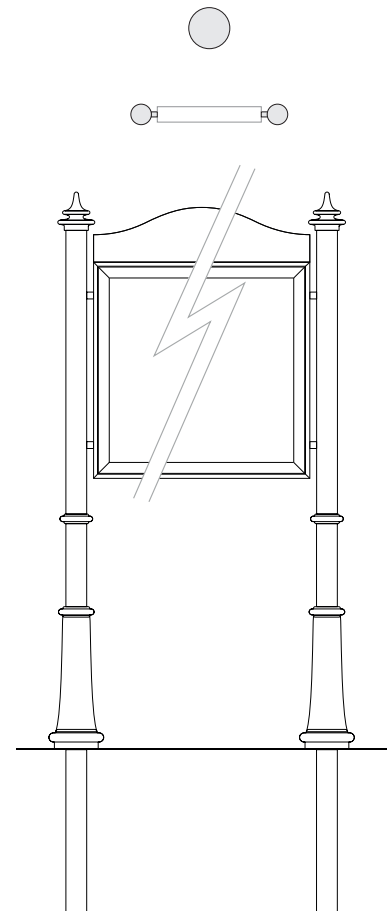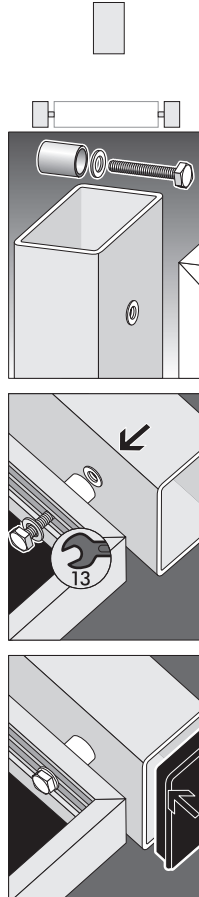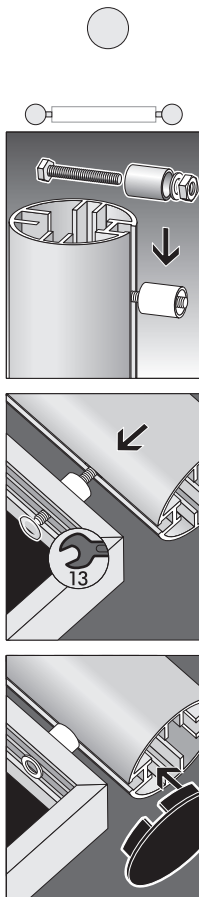
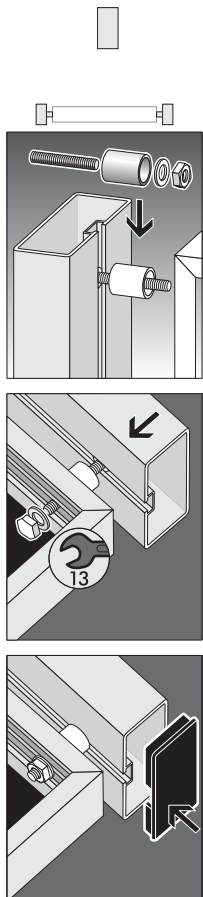



Recommended Ground Fixing

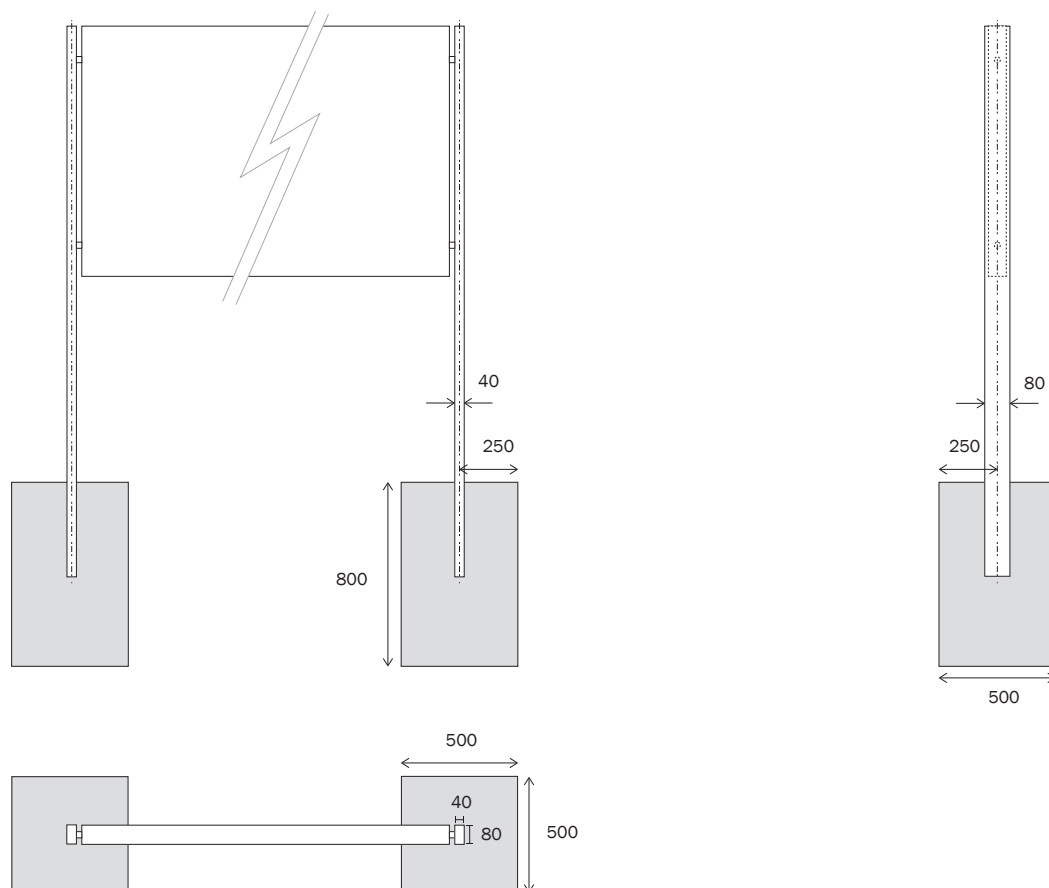

Lighting

Must be installed by a qualified electrician.

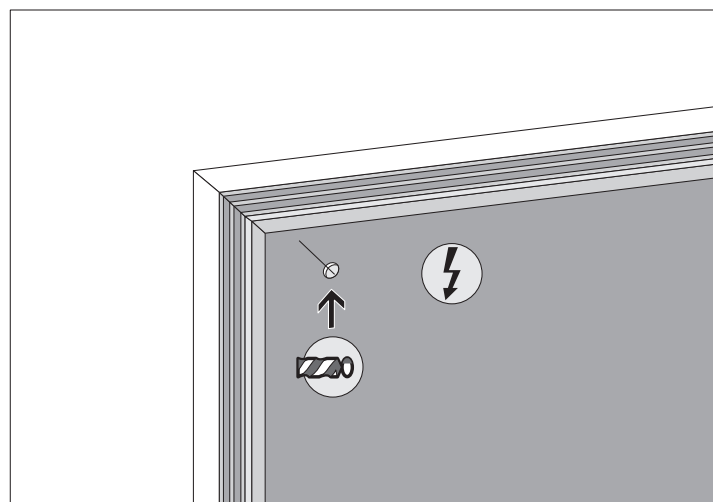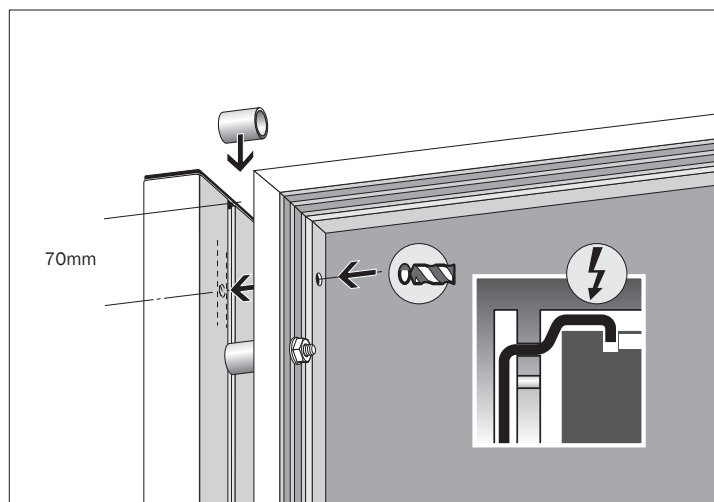

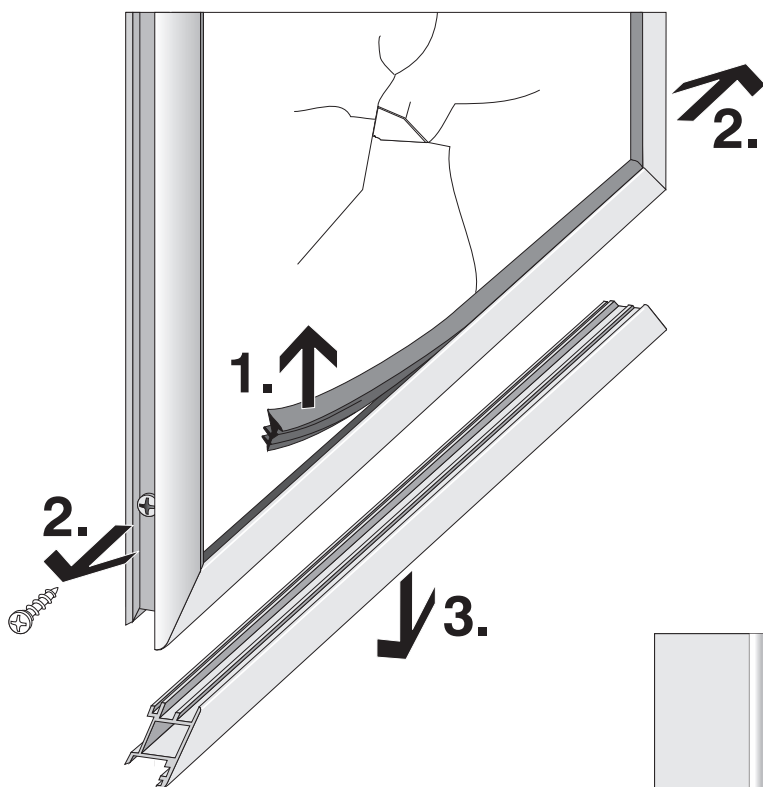


Replacing Glazing

1. Remove the rubber seal
2. Remove the screws on both sides of the door frame
3. Remove the bottom section of the frame

Caution: Glass could fall out. After replacing the glass replace the bottom of the frame, reinsert the screws.

Replacing Locks

Carefully remove the lock using a plastic or rubber hammer. When replacing the lock do not hammer directly on the cylinder. Drill a hole (18-20mm diameter) into a wooden block. Place the block on top of the cylinder when replacing the block.

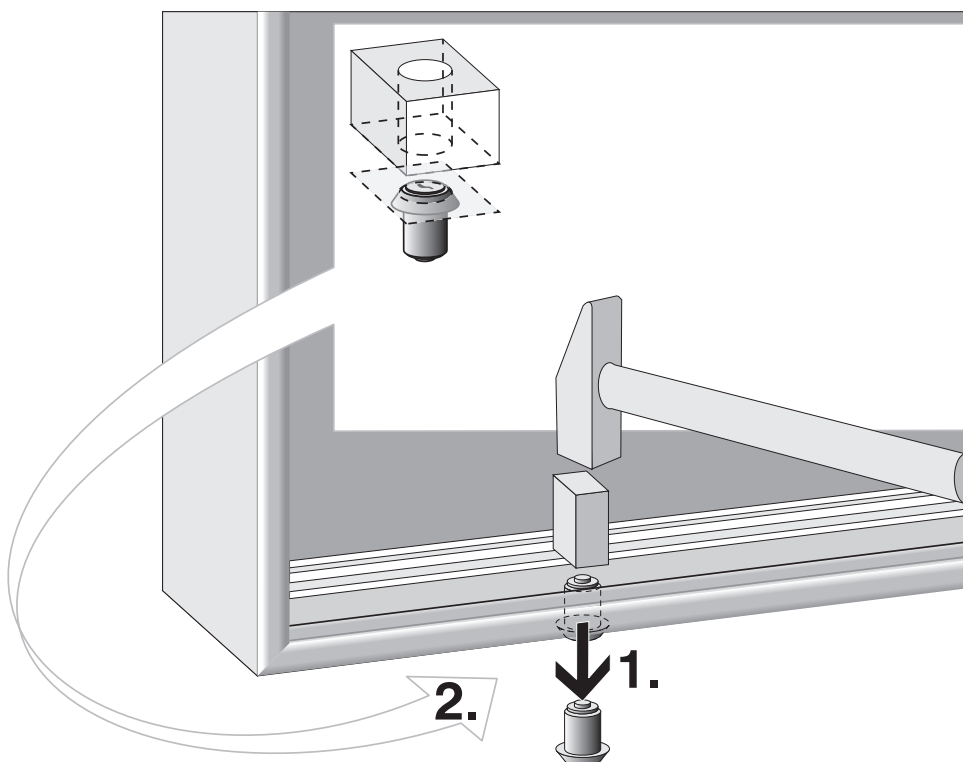

Damaged Items

In the unlikely event of damage occurring in transit, please advise us of this within **24 hours of receipt**, in order that we may claim against the carriers.