


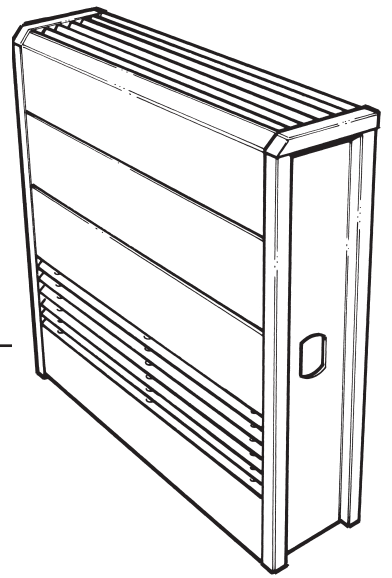

INSTALLATION INSTRUCTIONS

COCOON



FITTING PACK

Contents:-

- Chrome blank plug
- Air Vent
- Screws
- Washers
- Rawl Plugs

(Kit is located within shrink wrap of element)

HEATING ELEMENT

Always retain label with element until installation is complete. This will assist in casing pack selection (see fig. 6)

FIXING BRACKETS

Number of brackets required for casing lengths:-

- 40cm to 120cm = 2
- 140cm to 220cm = 3
- 240cm to 300cm = 4

CENTRAL SUPPORT FEET

Number required for casing lengths:-

- 40cm to 120cm = 0
- 140cm to 220cm = 1
- 240cm to 300cm = 2

POSITIONING DETAILS

RIGHT HAND CONNECTIONS

LEFT HAND CONNECTIONS

L = 40, 50, 60, 70, 80, 90, 100, 110, 120, 140, 160, 180, 200, 220, 240, 260, 280, 300

Fig. 1 Cut away ends of shrink wrap, remove fitting kit and push fit brackets onto end element plate. Illustration shows brackets fitted for right hand connections.

CLICK

Alternatively, if you need left hand connections – turn bracket through 180° before clicking onto heat exchanger

Fig. 2 Fit central support feet if unit is 140cm long or above, see instructions packed with feet.

Fig. 3 Offer up unit and mark wall fixings, positioning underside of heat exchanger **205mm above finished floor level**

Fig. 4 Drill 8mm holes, fit Rawl plugs and screw unit to wall.

Fig. 5 Fit valves and connect pipe work. Units can now be filled and tested, **but do not fit TRV head at this point.**

If top valves are being used refer to instructions packed with valve kits.

Fig. 6 Example. Casing pack selection.

Each front panel is 10cm high.

4 bracket nibs = 40cm plus 20cm to floor = casing height required **60cm (600mm)**

Element Label **L50, Type 10**

Casing pack required **60. 50. 10.**
H L D



INSTALLATION INSTRUCTIONS COCOON CASING ASSEMBLY

See supplement sheet for 40cm length casings

