
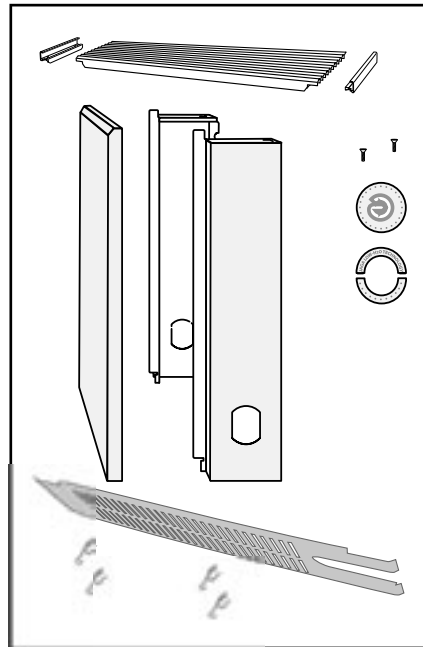


# SENTINEL

Montagehandleiding  
 Instructions de montage  
 Montagehinweis  
 Mounting instructions

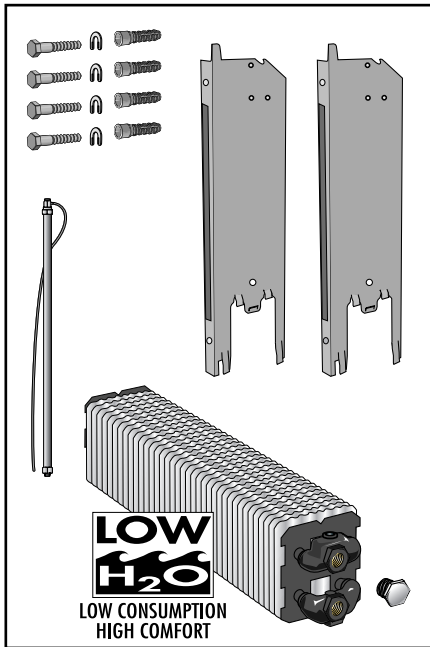

**OPTIE > OPTION**  
**VENTIELEN > VANNES > VENTILE > VALVES**

5090.130x

5094.414

5090.405

5090.407 \*

5090.1119

5090.1104

5090.1111


5090.1110

5090.402

5090.105

\* alleen type 06  
 \* seulement type 06  
 \* nur für Typ 06  
 \* only type 06

**AFMETINGEN  
 DIMENSIONS  
 ABMESSUNGEN  
 DIMENSIONS**

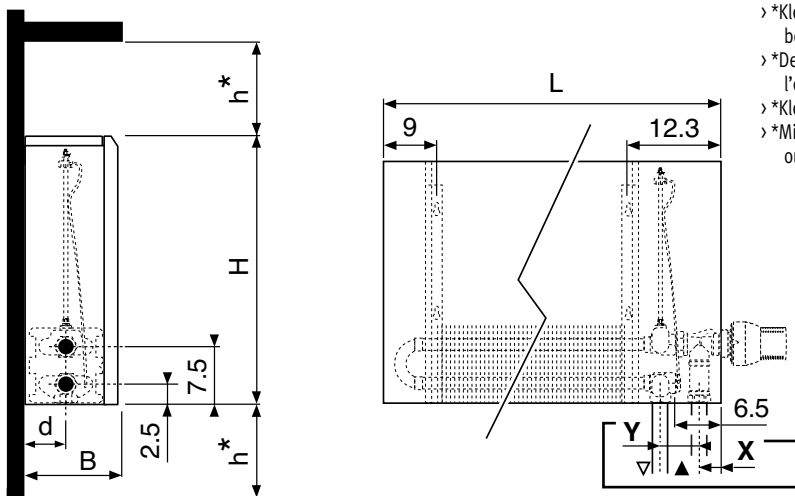

- > \*Kleinere afstanden kunnen een lichte daling van de afgifte tot gevolg hebben.
- > \*Des dimensions inférieures peuvent provoquer une légère diminution de l'émission de chaleur.
- > \*Kleinere Abstände verändern geringfügig die Wärmeleistung.
- > \*Minimal distance from finished floor. Smaller dimensions can decrease output.

| DIMENSIONS in cm |      |      |        |
|------------------|------|------|--------|
| Type             | B    | d    | h min* |
| 06               | 8.5  | 4.0  | 10     |
| 10-11            | 11.8 | 5.2  | 10     |
| 15-16            | 16.8 | 7.7  | 12     |
| 20-21            | 21.8 | 10.2 | 15     |

| CODE     | X   | Y   |
|----------|-----|-----|
| 5094.414 | 1.2 | 3.8 |
| 5090.405 | 2.7 | 5   |
| 5090.402 | 2.7 | 5   |
| 5090.407 | 2.7 | 5   |

