

# J O S E P H H A M I L T O N & S E A T O N



## GALLERY CLICK STONE

### Product Description:

Construction	PVC
Level of use	EN 22-33-42
Tile size in feet and inches	32,4 x 65,5cm (12.76" x 25.79")
Total thickness	EN 428 <b>ca.4,50mm (180 mils)</b>
Total weight	EN 430 <b>ca.7.680 (g/m2)</b>
Tiles in box	7pcs/box 1,49m2/box (15,99 ft <sup>2</sup> /box)

### Test Results

Fire Classification	EN 13501-1	<b>Bfl-s1</b>
Scratch resistance	EN 660-2	<b>Class T</b>
Squareness	EN 427	<b>&lt;0,35mm (planks A &amp; tiles A)</b>
Slip resistance	EN 13893	<b>DS</b>
Slip restraint	DIN 51130	<b>R9/R10</b>
Residual Indentation	EN 433	<b>&lt;0,10mm</b>
Furniture leg resistance	EN 424	<b>No cracks, no damage</b>
Curling	EN 434	<b>&lt;2mm</b>
Electrical resistance	EN 1081	<b>&lt;10<sup>9ohm</sup></b>
Dimensional stability	EN 434	<b>Average result measured &lt;0,05%</b>
Heat insulation	EN12524	<b>0,25 w/(m/k)</b>
Thermal resistance	ISO 8302	<b>0,0159m<sup>2</sup>/kw</b>
Electrostatic performance	EN 1815	<b>&lt;2kv</b>
Formaldehyde group	EN 717-1	<b>E1</b>
Acoustic insulation	ISO 717-1	<b>4db</b>
Castor chair resistance	EN 425	<b>no damage to wear layer, no delaminating</b>
Stain resistance	EN 423	<b>Very good</b>
Light fastness	ISO 105	<b>B02 &gt;6</b>
Under floor heating	EN 12524	<b>Suitable max 27<sup>0</sup>C</b>
Resistance to chemicals	EN 423	<b>Very good</b>
Wear layer	0.55mm	
Wear layer PUR treatment	Superguard	
Breem Rated	A	

### Guarantees:

- 20 year heavy commercial wear
- 20 year anti shock



2009/533

**JOSEPH HAMILTON & SEATON**  
RELAY PARK, RELAY DRIVE, TAMWORTH STAFFORDSHIRE, B77 5PR

TELEPHONE: (01827) 831400 TELEFAX: (01827) 831401  
EMAIL: sales@jhscarpets.com

Registered Office: Gorsey Lane Coleshill Birmingham B46 1JU England HFD Ltd Registered in England and Wales No. 2674152



## GALLERY Click Installation Instructions

Welcome to your brand **GALLERY** Click design floor. Click is designed to offer all the stunning detail and outstanding natural beauty of **GALLERY** but with quick and easy installation. After a very short installation period, your **GALLERY** Click floor will bring you years of pleasure. However, it's important to read these instructions carefully and follow them during fitting, as the guarantee will not apply if the floor is not fitted in accordance with these instructions.

### Recommended tools

- Broom and/or vacuum cleaner
- Tape measure
- Pencil
- Set square and ruler
- Utility knife
- Rubber mallet
- Tapping block

### General conditions

The installation of **GALLERY** is straight forward and follows the same guidelines that apply to all quality resilient tile floors. Good preparation is essential for a trouble-free installation. **GALLERY** can be laid on concrete, timber, stone and many other subfloors, which have been suitably prepared.

Site conditions must comply with the relevant national regulations. **GALLERY** is not suitable for external installation or unheated locations but it can be used with under-floor heating providing it is switched off for 24 hours before and after laying (the maximum permitted surface temperature is 28°C/81°F).

Tiles and sub-floor must be allowed to stabilise to a consistent temperature between 18°C and 27°C (64°F and 81°F) for a period of 24 hours before and after installation.

Tiles must be stored flat.

Following installation, **GALLERY Click** should be protected from heavy traffic for 24 hours and must not be washed for 24 hours. Always follow other manufacturers' recommendations when using their proprietary materials for sub-floor preparation.

### Preparation

- 1 The floor should be fitted at a room temperature of minimum 18°C/62°F and maximum 27°C/80°F.
- 2 Before installation, check all panels in daylight for possible defects or discrepancies in colour or shine.
- 3 Check that the tongue and groove of the click profile is free from dirt and undamaged.
- 4 For best results mix at least two packs when fitting to avoid repetitions in the pattern. It is also preferable only to use material from the same batch in a single room.
- 5 The surface beneath the floor must be sufficiently prepared in advance to guarantee successful fitting of the floor covering. In particular, it must be clean, dry, smooth, firm, level, free from defects and not contaminated with grease, oil or chemicals.

### Step-by-step fitting instructions

**GALLERY** Click is a "floating" floor. Never glue or fix the panels to the surface below.




The flooring can be installed wall-to-wall, however in large areas (greater than 50m<sup>2</sup>) or where the floor may be exposed to unusually wide temperature ranges (such as where under floor heating is used, in a conservatory or areas adjacent to a south facing window), then it is advisable to use a 5mm space around the edge, as appropriate.

For surfaces larger than 50m<sup>2</sup>, we advise that an expansion joint of 5mm is created around the perimeter of the room. In addition, should a single wall or run be longer than 10 linear metres, then a 5mm expansion joint should be allowed around the perimeter. If you are uncertain of the requirements, please contact your retailer who can confirm the exact requirements.

The **GALLERY** Click system panels can be joined in two different ways; either tongue-in-groove or groove-in-tongue. The simplest procedure, however, is groove-in-tongue. The advantage of the **GALLERY** Click system is that it allows you to choose your own starting position.

Moreover, you may work either from left to right or from right to left, whichever is best for you. Depending on the direction in which you work, you are advised to begin from either a corner or a door.

J O S E P H  
H A M I L T O N  
& S E A T O N

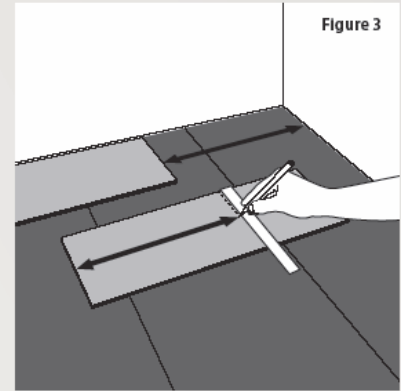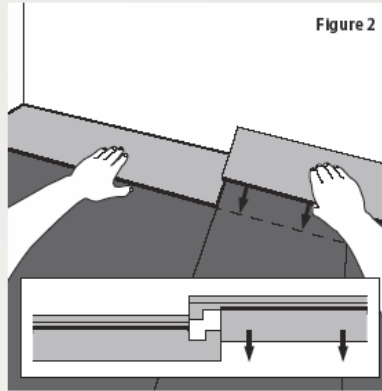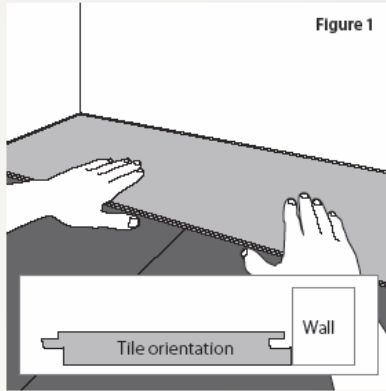

2009/533

**JOSEPH HAMILTON & SEATON**  
RELAY PARK, RELAY DRIVE, TAMWORTH STAFFORDSHIRE, B77 5PR

TELEPHONE: (01827) 831400 TELEFAX: (01827) 831401  
EMAIL: [sales@jhscarpets.com](mailto:sales@jhscarpets.com)

Registered Office: Gorsey Lane Coleshill Birmingham B46 1JU England HFD Ltd Registered in England and Wales No. 2674152

# J O S E P H H A M I L T O N & S E A T O N



It is advisable to begin with the groove side of the plank towards the wall and work from left to right.

- 1 Measure the room carefully to determine the central axis, from which the first row to be laid is outlined.
- 2 Check whether the first row of panels needs to be narrowed. If not, the lower groove lip of the first row of panels need to be removed. Use a utility knife to neatly cut off the lower groove lip.
- 3 Begin by laying the first row in the corner of the room on your left hand side as you are looking at the wall. Always work from left to right and with the tongue towards yourself. (Figure 1)
- 4 Lay the first row in a straight line and click the head ends together. Put the short side of the profile into head end of the previous panel and press the panel downwards. It is recommended to use a rubber mallet for connecting the head ends so that the joint fits securely. Continue laying the first row in the same way until you get to the last piece. (Figure 2)
- 5 For the last piece, measure the last plank to ensure a tight fit to the wall. Then cut away the marked piece and fit the end panel in the same way as the previous panels. When cutting the panel with a utility knife, make sure that you cut through the wear layer before breaking the panel. (Figure 3)
- 6 For an attractive and natural appearance, we advise you to use the piece left over from row 1 as the

first piece in the next row, as long as the remaining piece is at least 1/3 of the total plank length. Do this for all subsequent rows.

- 7 Fit the second row as you did for the first: start on the left side and slide the groove of the panel under an angle of about 25° over the tongue of the previous row and click the groove into the tongue by laying down the panel while pushing it firmly against the first row. (Figure 4)
- 8 Then fit the second panel by sliding the groove under at an angle of 25° into the tongue of the previous row. Position the corner of the head end against the previous panel and then drop the short side of the profile into the head end of the previous panel and push downwards. Use a rubber mallet for connecting the head ends so that the joint fits securely. Repeat until you reach the end of the row.
- 9 To ensure a firm Click installation, it is recommended that the planks are tapped together along the long edge with a tapping block and a rubber mallet. This will ensure that the Click mechanism is firmly locked during installation, providing a secure joint and avoiding any movement after the installation has been completed. (Figure 5)
- 10 To fit the last row of panels you will usually need to narrow them. Do this as follows: lay a panel on top of the previous row with the groove towards the wall, lay another panel upside

down up to the edge of the wall and mark the panel underneath. Cut the panel to size and fit the last row. (Figure 6)

- 11 Door posts and heating pipes also need to be individually fitted. First cut the panel to the right length. Then place the panel next to the object and draw the correct fitting. Next, cut the panel to size. Doorposts can also be sawn to size if necessary to lay the floor beneath them. For cutting around difficult areas such as door posts, heating pipes and other interior furniture; the use of a Jigsaw with the correct plastic cutting blades is suitable and will avoid unsightly cuts at the perimeter of the room.

## Care and maintenance

Congratulations! You have just installed a **Gallery** Click design floor. Your new floor has been produced in accordance with the highest standards and will give you years of pleasure in your home.

Although **Gallery** floors are one of the easiest floors to take care of, it is best to follow the recommendations provided here for optimal protection of the factory finish and to keep your floor looking fresh.






2009/533

**JOSEPH HAMILTON & SEATON**  
RELAY PARK, RELAY DRIVE, TAMWORTH STAFFORDSHIRE, B77 5PR

TELEPHONE: (01827) 831400 TELEFAX: (01827) 831401  
EMAIL: sales@jhscarpets.com

Registered Office: Gorsey Lane Coleshill Birmingham B46 1JU England HFD Ltd Registered in England and Wales No. 2674152

J O S E P H  
H A M I L T O N  
& S E A T O N

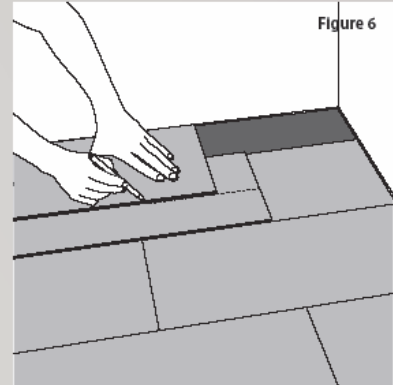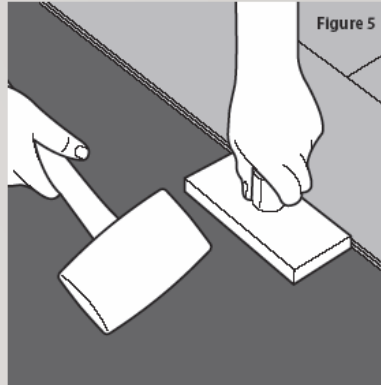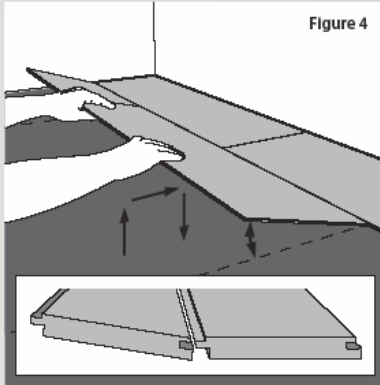

2009/533

**JOSEPH HAMILTON & SEATON**  
RELAY PARK, RELAY DRIVE, TAMWORTH STAFFORDSHIRE, B77 5PR

TELEPHONE: (01827) 831400 TELEFAX: (01827) 831401  
EMAIL: [sales@jhscarpets.com](mailto:sales@jhscarpets.com)

Registered Office: Gorsey Lane Coleshill Birmingham B46 1JU England HFD Ltd Registered in England and Wales No. 2674152




GALLERY CLICK

# Maintenance hints and safety information

 Poor maintenance can lead to a slippery floor, which can cause accidents. Please heed the precautions below to keep your floor as safe as possible.

## Safety and Prevention of Accidents

- (i) Wet floors can be slippery. Ensure suitable entrance matting is used to prevent the entry of water. Any water on the floor, even small drips from umbrellas etc., must be mopped up at once.
- (ii) Spillages of water, grease, food, chemicals and other foreign materials may also cause the floor to become slippery. Wipe up spills immediately with an absorbent cloth




 
- (iii) Many furniture polishes and glass cleaners contain chemicals and silicones which, in contact with the floor, may cause slipperiness. Even small amounts of overspray can create a hazard.
- (iv) When washing, exclude traffic from all treated areas until completely dry. Even damp floors can be slippery.
- (v) Be careful with the use of airborne insecticide, disinfectant and perfume sprays. Some contain oils or solvents which may settle on the floor in sufficient quantity to cause slipperiness.

## Maintenance and Protection

- (i) Vacuum or brush the floor regularly to remove dust and grit.
- (ii) Suitable entrance barrier matting or walk off mats when properly serviced can effectively remove many abrasive and foreign materials from foot traffic and cut down on tracked-in water. These will reduce the maintenance requirement in entry areas and extend the life of the floor. A minimum of two full strides of entrance matting is recommended.
- (iii) Avoid rubber or latex backed mats as these may leave stains.
- (iv) Some airborne insecticides may also harm the surface of the tile.
- (v) Protect against scratching from furniture feet by using wide free-moving castors, glides, rollers or felt pads. Use furniture cups under heavy items or appliances to prevent indentation.
- (vi) Do not use small or narrow castors or those with crowned tread, as they can damage the floor.
- (vii) Do not allow cigarettes, matches or other very hot items to contact the floor.

## Selection of Maintenance Products

- (i)  Products containing soap or unsuitable detergents such as washing up liquid may leave hard-to-remove film or residue on the surface. These can detract from the appearance and may be slippery.
- (ii) Do not use products at too high a concentration as this may leave a surface residue.



J O S E P H  
H A M I L T O N  
& S E A T O N



Figure 1

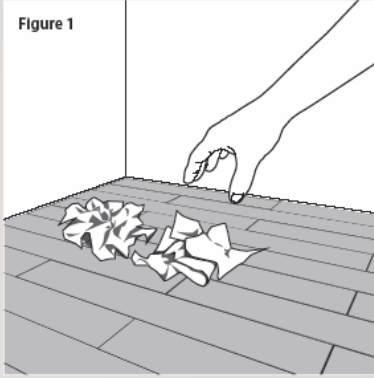


Figure 2


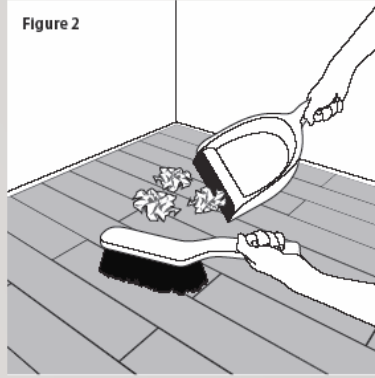


Figure 3

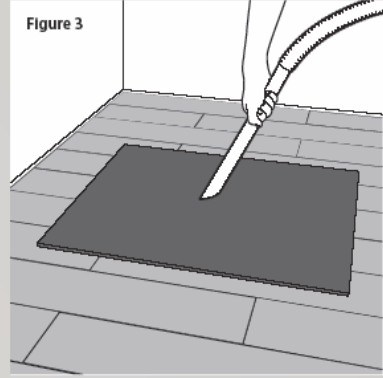

2009/533

**JOSEPH HAMILTON & SEATON**  
RELAY PARK, RELAY DRIVE, TAMWORTH STAFFORDSHIRE, B77 5PR

TELEPHONE: (01827) 831400 TELEFAX: (01827) 831401  
EMAIL: [sales@jhscarpets.com](mailto:sales@jhscarpets.com)

Registered Office: Gorsey Lane Coleshill Birmingham B46 1JU England HFD Ltd Registered in England and Wales No. 2674152



## General floor maintenance

All floors should be swept and dust mopped daily, following which soiling and marking can be removed using the appropriate method described below. Before commencing work, put out signs to warn people that cleaning is in progress.

### Daily sweeping and dust mopping

- (i) Pick up litter and thoroughly sweep the floor area. **Figure 1**
- (ii) Pick up debris with dustpan and brush or vacuum. **Figure 2**
- (iii) Vacuum walk-off mats and crevices at entrance(s). **Figure 3**

### Manual mopping - Ideal for small or congested areas.

Manual mopping is used for soil removal in small or congested areas (including within large floors) and some mark removal. Spray cleaning may be required for heavier surface marking.

- (i) Using a two-bucket mopping system, apply solution using well-wrung mop to remove soiling. **Figure 4**
- (ii) Mop using overlapping strokes. **Figure 5**
- (iii) Rinse the mop frequently and change the solution as necessary.
- (iv) Allow entire floor area to dry thoroughly.
- (v) Remove "Caution" signs. Ensure all equipment is cleaned thoroughly after use and stored safely.

### Spray Cleaning - Ideal for small / medium size areas

Spray cleaning can be used for light soil removal in small/medium size areas and removal of most scuff marks from all floor sizes. Pre-wash (see Manual mopping) if the floor is heavily soiled.

- Follow daily sweeping and dust mopping instructions.

- Apply a fine mist of liquid on to an area of approximately 2 square metres at a time. Use a rotary buffing machine (approx. 450 rpm) fitted with a red 3M nylon scrubbing pad (or equivalent). **Figure 6**

 
- Work in parallel overlapping passes until the floor is clean and dry. **Figure 7**

- Remove "Caution" signs. Spray Clean/ Spray Polish 2 sq.m at a time

### Scrubber Drying - Ideal for large areas

Scrubber dryers may be used for high productivity removal of soiling and some scuff mark removal. Spray cleaning may be required to remove heavier surface marking.


- i) Follow daily sweeping and dust mopping instructions.



- iii) Scrub entire floor area.
- iv) Remove "Caution" signs. Ensure all equipment is cleaned thoroughly after use and stored safely.

### Tips - Dealing with spills

 
- (i) Spills of water, grease, food, chemicals and other foreign matter may cause the floor to become slippery.



- (iii) Allow the floor to dry thoroughly.

### Notes

 - (i) **Gallery** should not be buffed with any pad more abrasive than a red 3M pad (or equivalent).



J O S E P H  
H A M I L T O N  
& S E A T O N



Figure 4

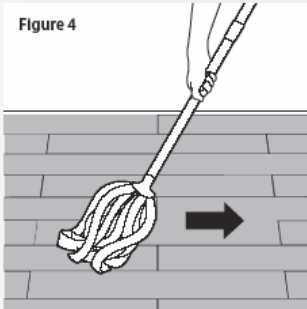


Figure 5

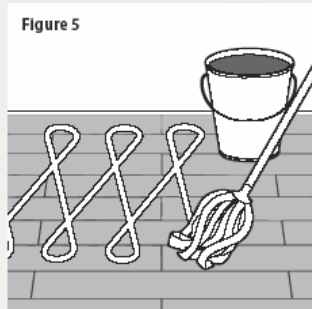


Figure 6


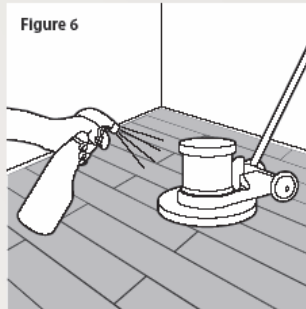


Figure 7

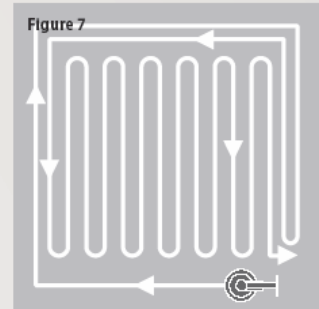

2009/533

**JOSEPH HAMILTON & SEATON**  
RELAY PARK, RELAY DRIVE, TAMWORTH STAFFORDSHIRE, B77 5PR

TELEPHONE: (01827) 831400 TELEFAX: (01827) 831401  
EMAIL: [sales@jhscarpets.com](mailto:sales@jhscarpets.com)

Registered Office: Gorsey Lane Coleshill Birmingham B46 1JU England HFD Ltd Registered in England and Wales No. 2674152



### Preventative maintenance

- 1 Place non-rubber doormats at entrances to stop large amounts of dirt from getting indoors.
- 2 Use felt under furniture and chair legs. Rolling office chairs should be fitted with non-rubber casters.
- 3 Clean the floor at least once a week with a vacuum cleaner or mop. You will need to do this more often if you use the floor intensively.
- 4 Stiletto heels can also damage the floor.
- 5 Avoid long-lasting exposure to direct sunlight. Use curtains or blinds at peak times to minimise the effect of direct sunlight. Most types of floor discolour under the influence of direct sunlight. To avoid colour discrepancies, you should move the floor coverings present with a certain degree of regularity.

### Technical data

---

**Composition:**

Permanent resilient underlayment including mineral fillers and Polyurethane binder.

---

**Thickness:**

Approx. 1.5 mm (+/- 0.1 mm)

---

**Roll format:**

Approx. 10 m x 1 m (10m<sup>2</sup> per roll)

---

**Weight per sqm:**

1.5 kg/m<sup>2</sup>

---

**Weight per roll:**

15 kg/roll

---

**Fire behaviour:**

Bfl - S1 as per EN 13501-1

---

**Footfall sound absorption:**

Approx. 11db/EN 140-5

---