
Contact Details

Please note that some of the contact details on this PDF document may not be current.

Please use the following details if you need to contact us:

Telephone: 0844 879 3588

Email: customer.services@gdcgroup.co.uk

The Help Centre section of this website also features a wide range of information which may be of use to you and is available 24 hours a day. It includes:

- Operating and installation instructions downloads
- Request a repair
- Where to buy our products
- Literature downloads
- Heating requirement calculator

www.credaheating.co.uk/help-centre

OPERATING INSTRUCTIONS FOR 'GCL' CONTROL

CONTROL UNIT type R80 HSE designed for use with NOBO Panel heaters using Series 8 controls.


GCL – T2

Temperature control module. **256 F**

A Control module with restricted temperature scale (14 - 24), fixed 16°C. economy setting and two hour boost timer.

KEY to Fig. 1.

- 1 – Temperature adjustment control.
- 4 – Red Comfort mode indicator light.
- 5 – Green Economy mode indicator light.
- 6 – Amber operating indicator light.
- 8 – On / Off switch. 1 = On, 0 = Off.
- 9 – Boost timer button.

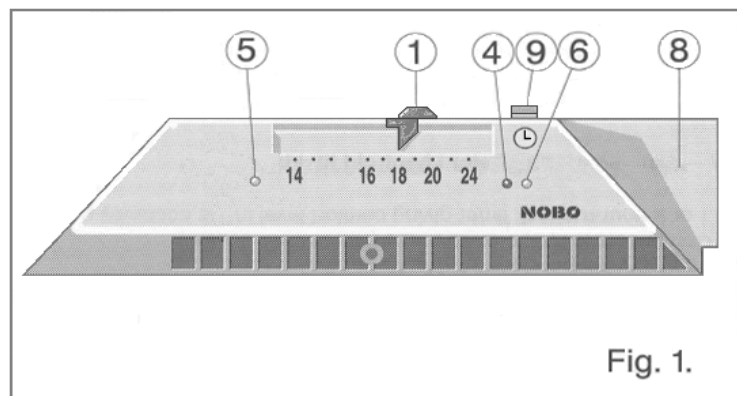

OPERATING INSTRUCTIONS

- Switch the heater on with switch (8).
- Set required temperature with control (1).
- Press the Boost timer button (9).

When the thermostat calls for heat the amber indicator will also glow.

The action of the electronic thermostat provides proportional regulation of temperature. The Amber operating indicator light will be seen to go on and off at frequent intervals as it adjusts the amount of heat supplied to maintain room temperature. When room temperature is more than 1°C below the thermostat set point the heater will operate continuously but during the last one degree the operation will be proportionally reduced until the required temperature is achieved.

When the green indicator (5) is visible the heater will operate in economy mode and maintain the pre-set background temperature. When the Boost timer button (9) is pressed the mode of operation is changed from economy mode to comfort mode. The green indicator will go out and the red indicator will come on. If the room temperature is below the set point (1) the amber indicator will come on and the heater will raise room temperature accordingly. At the end of the timed period the heater will go back to economy mode.

T2 type heaters have two-hour timers and will only remain in boost mode for two hours. If a longer period in boost mode is required the timer button must be pressed again after the first period has expired.

Heaters with a temperature scale of 14 – 24 will only provide heat output when the room temperature is below 24°C. if the room temperature is higher than 24°C. then the heater will not operate until the room temperature falls below 24°C.

NOTE

- The heater should not be covered or things be placed on or over the heater.
- The heater is fitted with an over-temperature cut-out which will switch off the heating element in the event of the heater becoming too hot. The element will not be switched back on again until the heater has cooled.

CLEANING

- The heater may be cleaned with a damp cloth and mild detergent.
- The heater may be tilted forwards on its mounting bracket for cleaning and decorating behind the heater.
- Pressing the clips downward at the back of the heater will release the heater from the mounting bracket.