



Fitting the OTL Linear Tanking Mat






On The Level
 Unit 8
 Youngs Industrial Estate
 Stanbridge Road
 Leighton Buzzard
 Bedfordshire
 LU 7 4QB
 TEL : 01525 373202
 FAX : 01525 373222

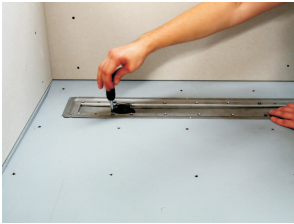



1. Remove the screws that secure the clamping ring to the main channel. Lift out the clamping ring and screws, set aside

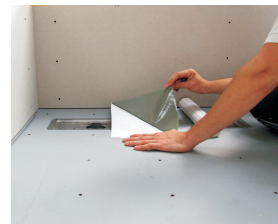

2. Remove the roll of tanking mat and lay over the drain. With the mat laid flat peel the backing tape from one corner then back 150mm. Place the edge of the tanking mat against the inside edge of the tray and centrally over the channel. Apply enough pressure for the mat to adhere to the tray.

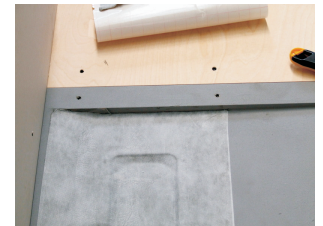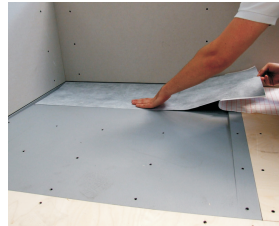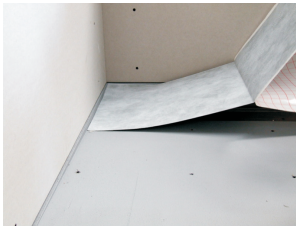


3. Lift up the tanking mat and gently removing the backing tape approx 300mm at a time, apply even pressure to the mat and stick down. Fold the mat into the tray the other end and trim with a sharp knife.

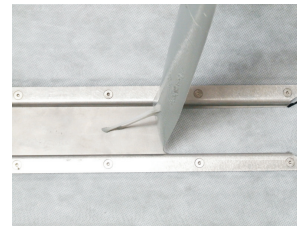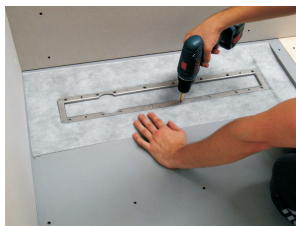

4. Position the clamping ring into the main channel and push down. Screw the clamping ring to the main channel through the tanking mat. With a sharp knife cut along the inside edge of the clamping ring and remove the excess tanking mat.

Tank the complete area with the OTL Tanking System all as per our instructions

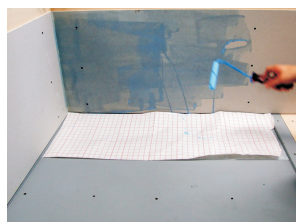

OTL 022 Primer



OTL 028 internal corner



OTL 023 Tape



OTL 025 Compound