 


## Defender Door Lock – User Guide

### SECURE ESCAPE HAS THREE MODES OF OPERATION

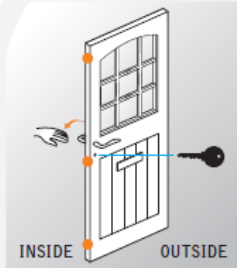

#### SECURE ESCAPE (FIRE ESCAPE) MODE

**Recommended for when the property is occupied.**

To open when outside a key is required, turn the key and depress the handle lever.

When inside and the door is closed engage the top and bottom locking points by simply lifting the handle lever and allow the handle to return to the horizontal. The door (lock) is now secure from the outside.

To open the door from the inside simply press the door lever handle downward, no key operation is required.




#### CONVENIENT MODE

**To allow easy access without using a key. This mode is not secure and designed purely for the convenience of the occupier.**

Push in the centre latch and hold in place either by pushing up the orange snib on the door edge door lock or, if fitted, by turning the snib/knob on the inside handle.

Once this operation has been carried out and the latch is held back the door may be closed and the handle lever lifted so the top and bottom locking points engaged ensuring the door does not swing open.

To disengage "convenient mode" release the centre latch by pushing the faceplate snib down or by turning snib/knob on the inside handle (if fitted).

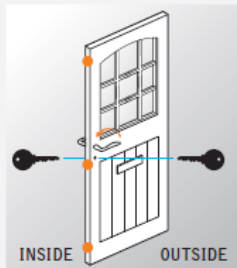


#### FULLY SECURE

**Only recommended for when the property is unoccupied.**

From the outside lift the handle lever to engage the lock at top and bottom of the door, turn the key to engage the centre deadbolt.

A key is needed both outside and in to unlock the door.

### FREE MODE HAS A SINGLE OPERATION

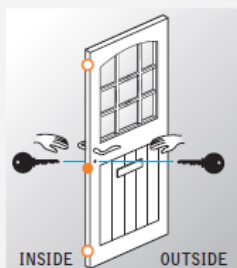

#### GENERAL FREE MODE

**When not set to secure escape mode your door requires a key from both the inside and out to lock and unlock the door.**

Simply lifting the handle lever and engaging the locking points at the top and bottom of the door does not secure the door.

To secure and engage the locking points and to deadlock the door, turn the key.