





Outside View

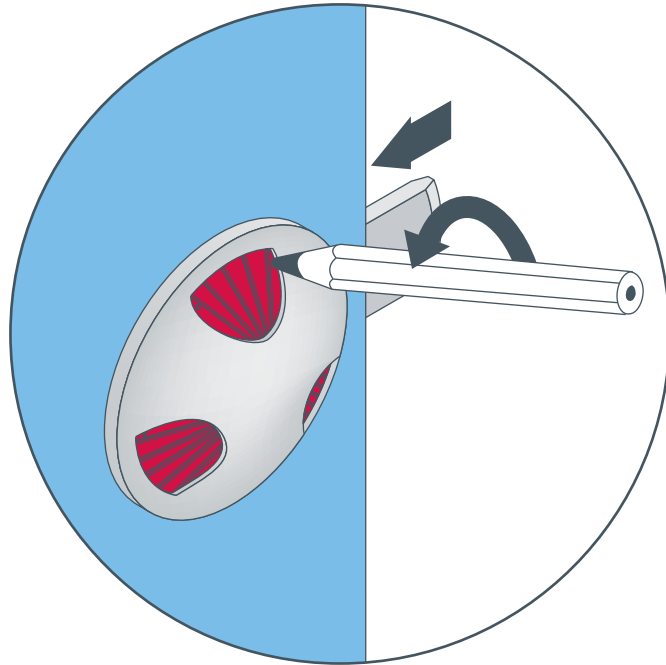

Emergency Release:
To slide indicator bolt free from keep,
insert pen/pencil into recess
provided in the outside fascia and
rotate red indicator as shown.

Inside View

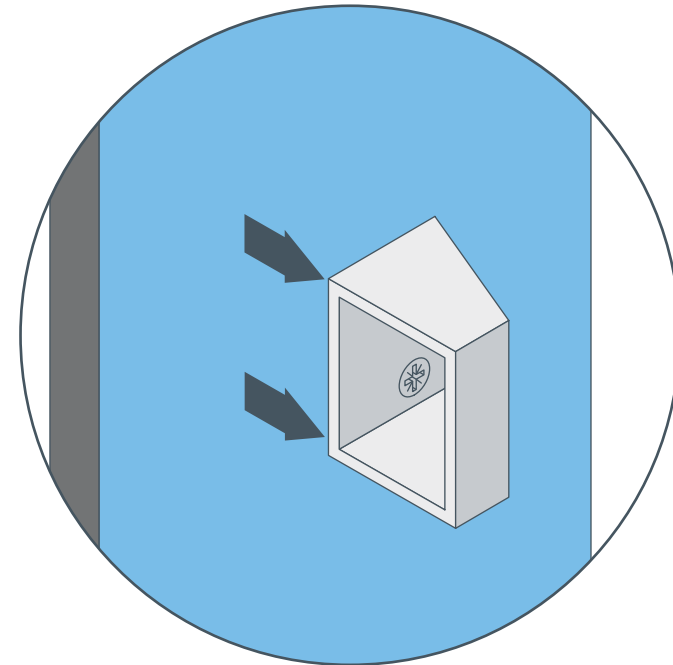

Emergency Release:
Aluminium keeps will come away from
the pilaster when forced. ABS keeps are
sacrificial and are designed to break in
similar circumstances.