
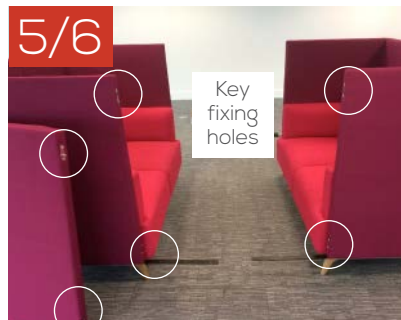


## Tryst Booth assembly instructions

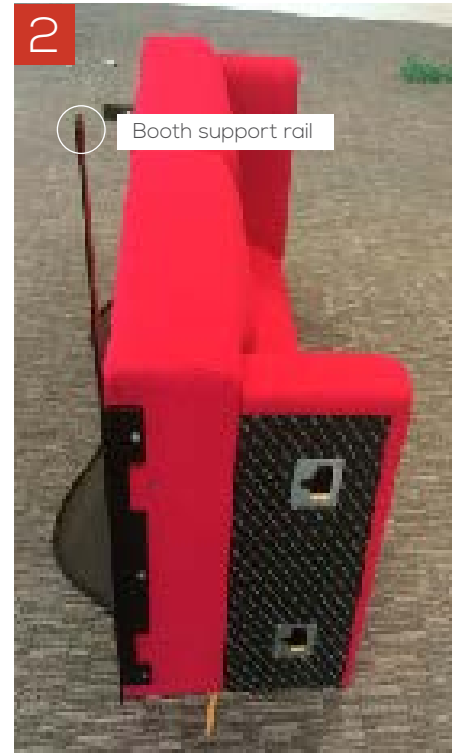

Your Tryst module will be supplied unassembled, with all the fixings supplied for the complete assembly. This allows for the units to be transported through a building to the assembly area in a safe and easy manner. In this 'knocked down' format, each piece is of a suitable size to be transported in a standard lift.

The number of pieces per unit supplied will be dependant on the product ordered, but will consist of: screens, seating units, table tops, leg frame and legs.

### Instructions

- 1 Remove packing glides and place the two units together.
- 2 Add booth support rail, leg frame and legs.
- 3 Repeat making a left & right
- 4 Add screens to each sofa & secure internally
- 5 Place the sofa, units facing each other
- 6 Add final screen using the adjustable key to close any gaps.
- 7 Finally, secure the central screen to the booth support rail from underneath.

## Tryst Sofa assembly instructions

Your Tryst module will be supplied unassembled, with all the fixings supplied for the complete assembly. This allows for the units to be transported through a building to the assembly area in a safe and easy manner. In this 'knocked down' format, each piece is of a suitable size to be transported in a standard lift.

The number of pieces per unit supplied will be dependant on the product ordered, but will consist of: screens, seating units, table tops, leg frame and legs.

### Frame assembly Metal and wood

#### Metal

- 1a Insert the leg into the box section frame, one per corner and rotate the bolts anti-clockwise to tighten the legs to the frame.


#### Wood

- 1b Place the leg at the end of the box section frame and secure with 3 bolts to the frame. Complete both ends of the frame.



### Attaching the leg frame to the body: Completing the unit

- 2 Remove packing glides.
- 3 Offer the Screen and Seating unit together, ensuring the positioning fixtures are aligned.
- 4 To secure the screens to the seating units, use the 10x M8-50mm bolts. This is done through the unzipped under cloth. Please re-zip the under cloth after this stage.
- 5 Place the leg frame on the underside of the unit and secure with the 16 x M8 button head bolts.
- 6 Rotate the unit so that it is upright. The same method is used on the high backs.

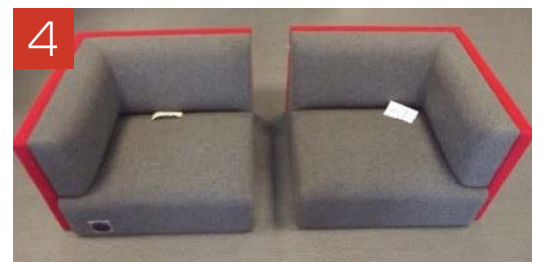

\* Please note that the unit shown includes the optional power unit