


Step 1: Drill 4 number 14mm holes in each corner of the Lockerpod+ roughly 150mm from each side. Ensure drill penetrates Lockerpod+ and goes 55mm into ground.



Step 2: Ensure oversized washers are placed on loose bolt then push loose bolt through Lockerpod+ into hole. Note: Bolts may require tapping with a hammer.

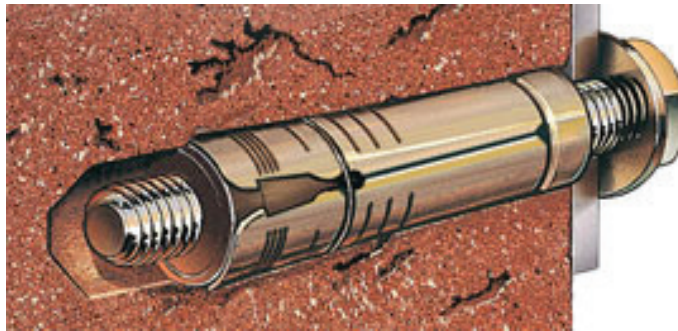

Step 3: Tighten loose bolt with appropriate spanner until secure.

Call **0845 094 0490** if you require any further assistance.