

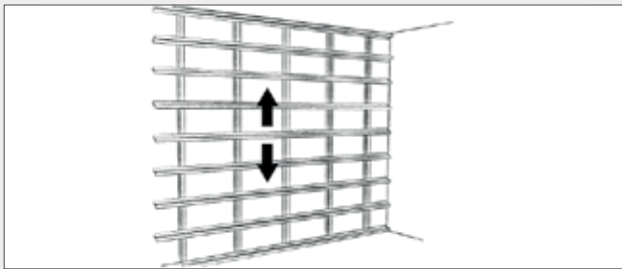


INSTALLATION GUIDE

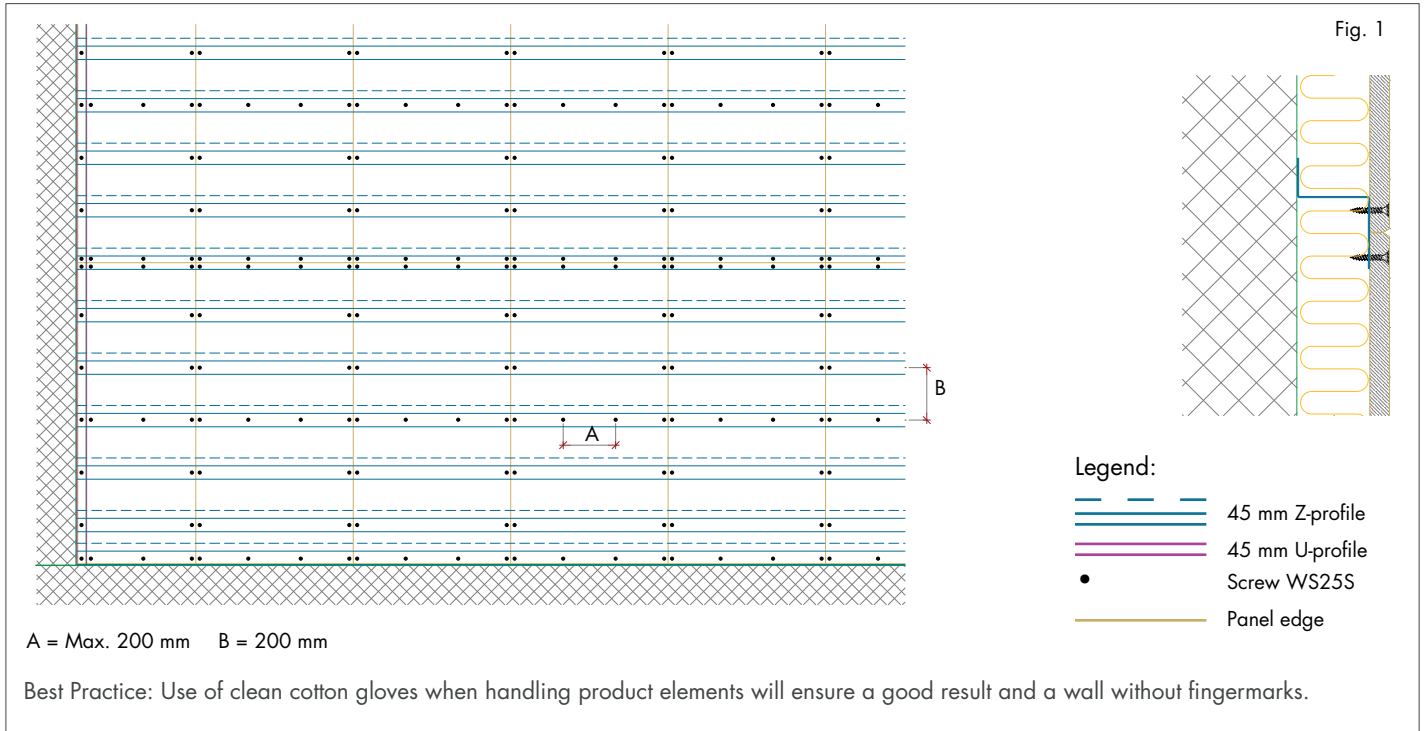


LAYOUT

- Perforated wall panels are normally installed on the upper section of a wall in accordance with acoustic requirements and the shape of the room in question.
- However, perforated panels can also be used to surface an entire wall, depending on the degree of physical impact.
- Follow any available drawings or divide the surface of the wall so that the perforated modules are positioned symmetrically in the room.
- If there are no requirements on impact resistance in accordance with DIN 18 032-3, a furring can be installed at 300 mm c/c with a corresponding increase in the distance between screws.

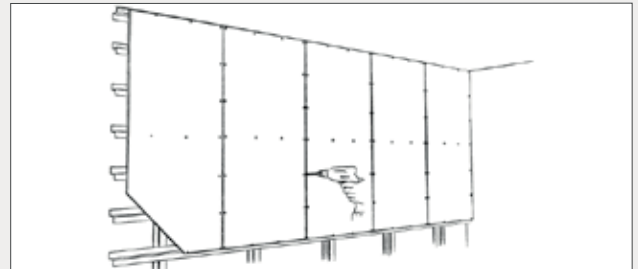

INSTALLATION

- Always wear clean cotton gloves when handling the panels.
- Mark the position of screws on the Contrapanel. Use the supplied template for this if necessary.
- Install the panels.
- Install the first row with the help of string.
- The perforated fields must be flush in their own rows and at right angles to the adjacent fields.
- Use white screws.

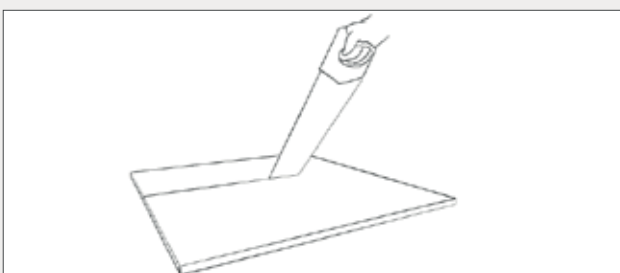

CUTTING

- Cut the elements to size from the front with a fine-toothed saw.