



Installation Instructions for the OTL ALTCK Antiligature Tile Conversion Kit for the OTL TSG1 TSG 2 / TSG50 / TSG52 (116) / USG 1 / USG 3.

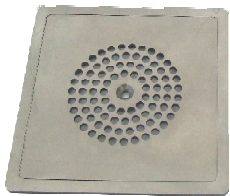

Antiligature Tile Frame and Grating



Loctite Thread Lock and Sealant

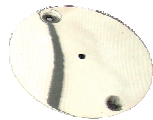

Antiligature Stainless Steel top



M6 Tamperproof pin Countersunk screw



Antiligature Alinement jig




Screwdriver bit



M6 Washer





On The Level
 Unit 8
 Youngs Industrial Estate
 Stanbridge Road
 Leighton Buzzard
 Bedfordshire
 LU 7 4QE
 TEL : 01525 373202
 FAX : 01525 373222

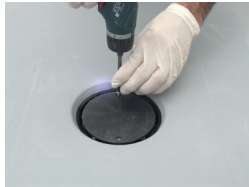




1. Remove the screws from the top cover of the gully and set aside. Lift out the top cover and dip tube.





2. Remove the screw that secures the top cover to the dip tube. Discard the top cover and insert the dip tube back into the gully.

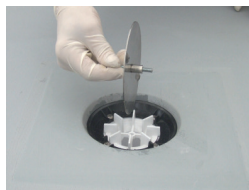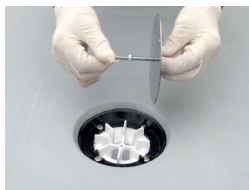



3. Screw the alignment jig (down to the nut) into the top of the Stainless Steel top. Place the Stainless Steel top into the gully and secure with the two screws set aside earlier.

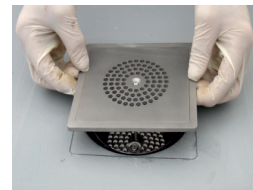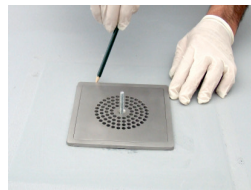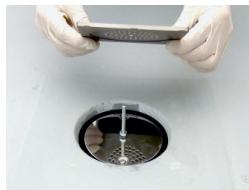




4. Place the washer on the alignment jig. Position the grate and frame over the alignment jig on to the floor. With a pencil mark the position of the grate and frame on the floor. Remove the grate and frame.

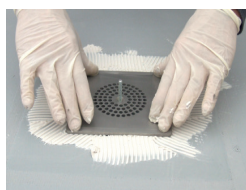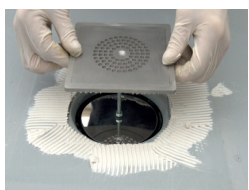

5. Apply tile adhesive to the area marked with the pencil, position the grate and frame over the alignment jig. Bed the grate and frame down onto the tile adhesive to the correct height. Tile the rest of the floor.

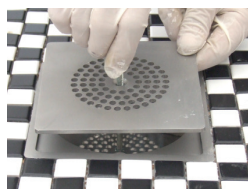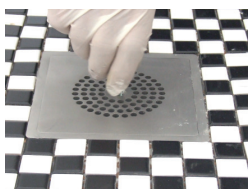

6. When the floor is dry unscrew the alignment jig and lift out the grating.

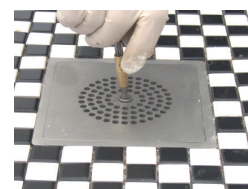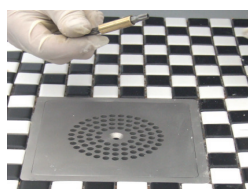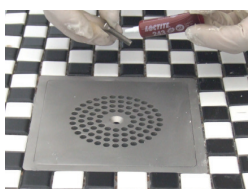

7. Replace the grating and apply a small amount of Loctite to the lower part of the screw. With the screwdriver bit insert the screw through the grating into the Stainless Steel top.