


Flexyfix Adhesive




1. When on site, check step measurements with cut Stair Nosings supplied. Trim if required. Prepare step edge surfaces. The substrate must be sound, clean and free of contaminants or loose material.



2. Apply the adhesive to the underside of the profile in a 5mm wide bead beginning 5mm in from the outer edge of the profile. Apply the next 5mm bead of adhesive approximately down the middle of the profile. (See figure 1 and 2)

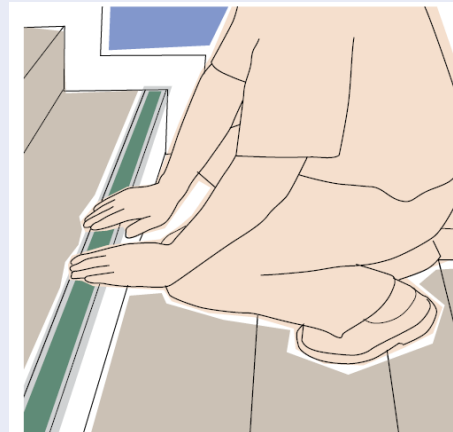

3. Place the profile so that the leading edge is overlapping the edge of the step by 5mm and press down whilst sliding the profile into place. Press down firmly on the profile to ensure a full bond.

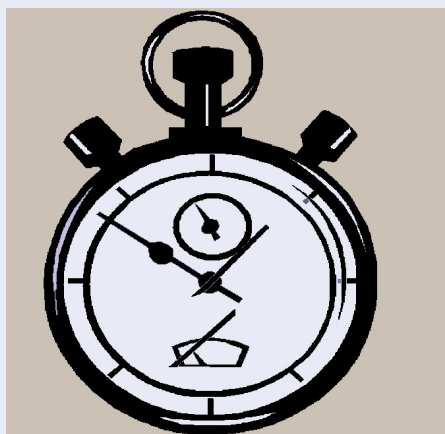

4. Allow 1 hour after fixing before opening the area to traffic. It is the contractor's responsibility to check the bond is secure before opening the area to traffic.

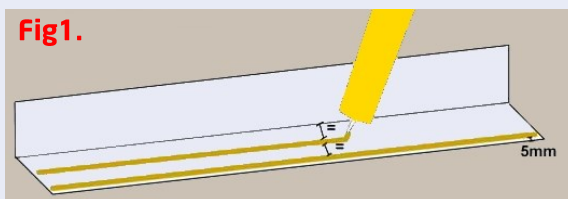


Fig1.

Fig1. If the profile is Single Channel 2 adhesive beads will be sufficient.

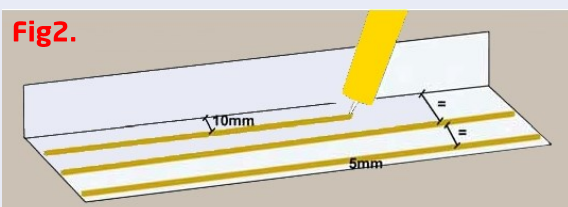


Fig2.

Fig2. If the profile is Double Channel a further bead of adhesive will be required 10mm in from the inside edge.

Notes

- Use a n18 to 1 professional skeleton Gun to apply Flexyfix
- Cut the nozzle to form a 5mm diameter hole.
- Not Suitable for use on Asphalt or Bitumen substrate
- The substrate must be sound, clean and free of contaminants or loose material.

Technical

The adhesive is hazard free, contains no Water, Isocyanates or Solvents. For the full Technical Datasheet go to www.rewmar.co.uk

Cleaning

Wipe clean with a Rewmar Wipe. Do not use solvents

Bond Warranty

Rewmar Ltd warrant the bond against normal wear and tear provided the adhesive is applied as described in these instructions and the substrate is: Sound, clean and free of contaminates or loose material. For further details call Rewmar on 0333 800 1966