


Place SAM 01 profile block on side spindle 2.  
 Place SAM 01 profile block on side spindle 3.  
 Place Angle B profile block on the first top spindle, to produce Chamfer.

Please tick in box - Is chamfer a visible top surface for priming YES  NO

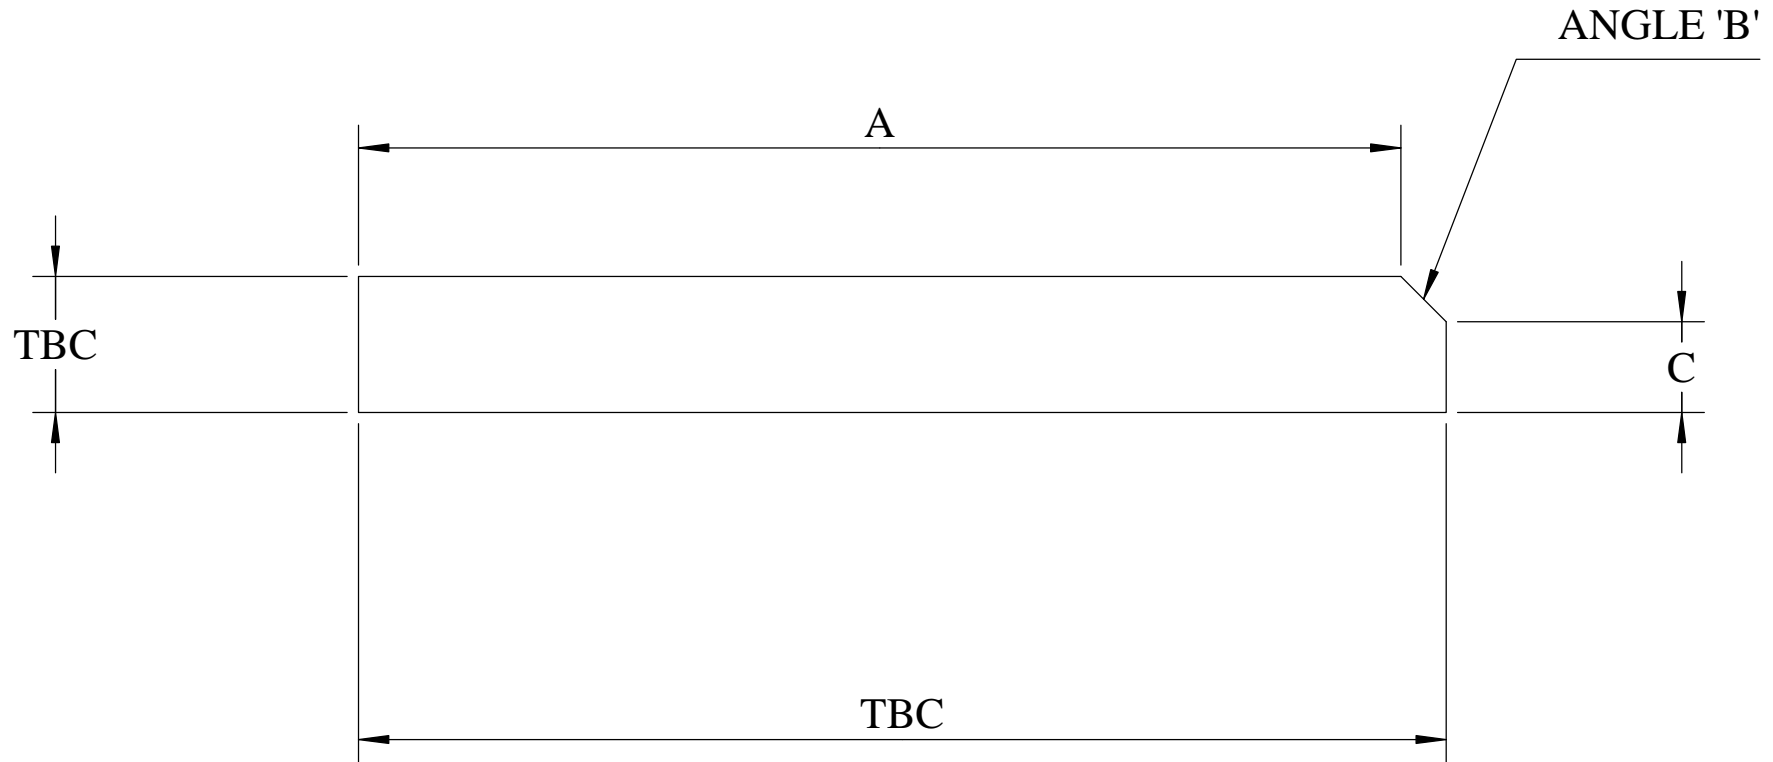

PRINTED COPY UNCONTROLLED

CUSTOMER TO CONFIRM DIMENSIONS A+B+C INCLUDING PRODUCT WIDTH AND THICKNESS.  
 WHEN DIMENSION C=0, ANGLED CUTTER MUST BE SET ON SIDE HEAD!

<p><b>SAM MOULDINGS</b></p> <p>Newpark Industrial Estate Greystone Road Antrim BT41 2DU          Tel : (028) 9442 8288 Fax : (028) 9442 8244          Website: <a href="http://www.sammouldings.co.uk">www.sammouldings.co.uk</a> Email: <a href="mailto:info@sammouldings.co.uk">info@sammouldings.co.uk</a></p>	PROFILE	DRAWN BY	M.KIRKPATRICK	REV:
	SP 601	DATE	23/5/00	AUTH:
		SCALE	1:1	TOLERANCE +/- 0.5MM