


Place SAM 01 profile block on side spindle 2.
 Place SAM 50 profile block on side spindle 3.
 Place 8-15mm Adjustable Groover on the last bottom spindle, to produce rebate.

**Bullnose must be checked using set square
 set square is kept in the toolroom.**

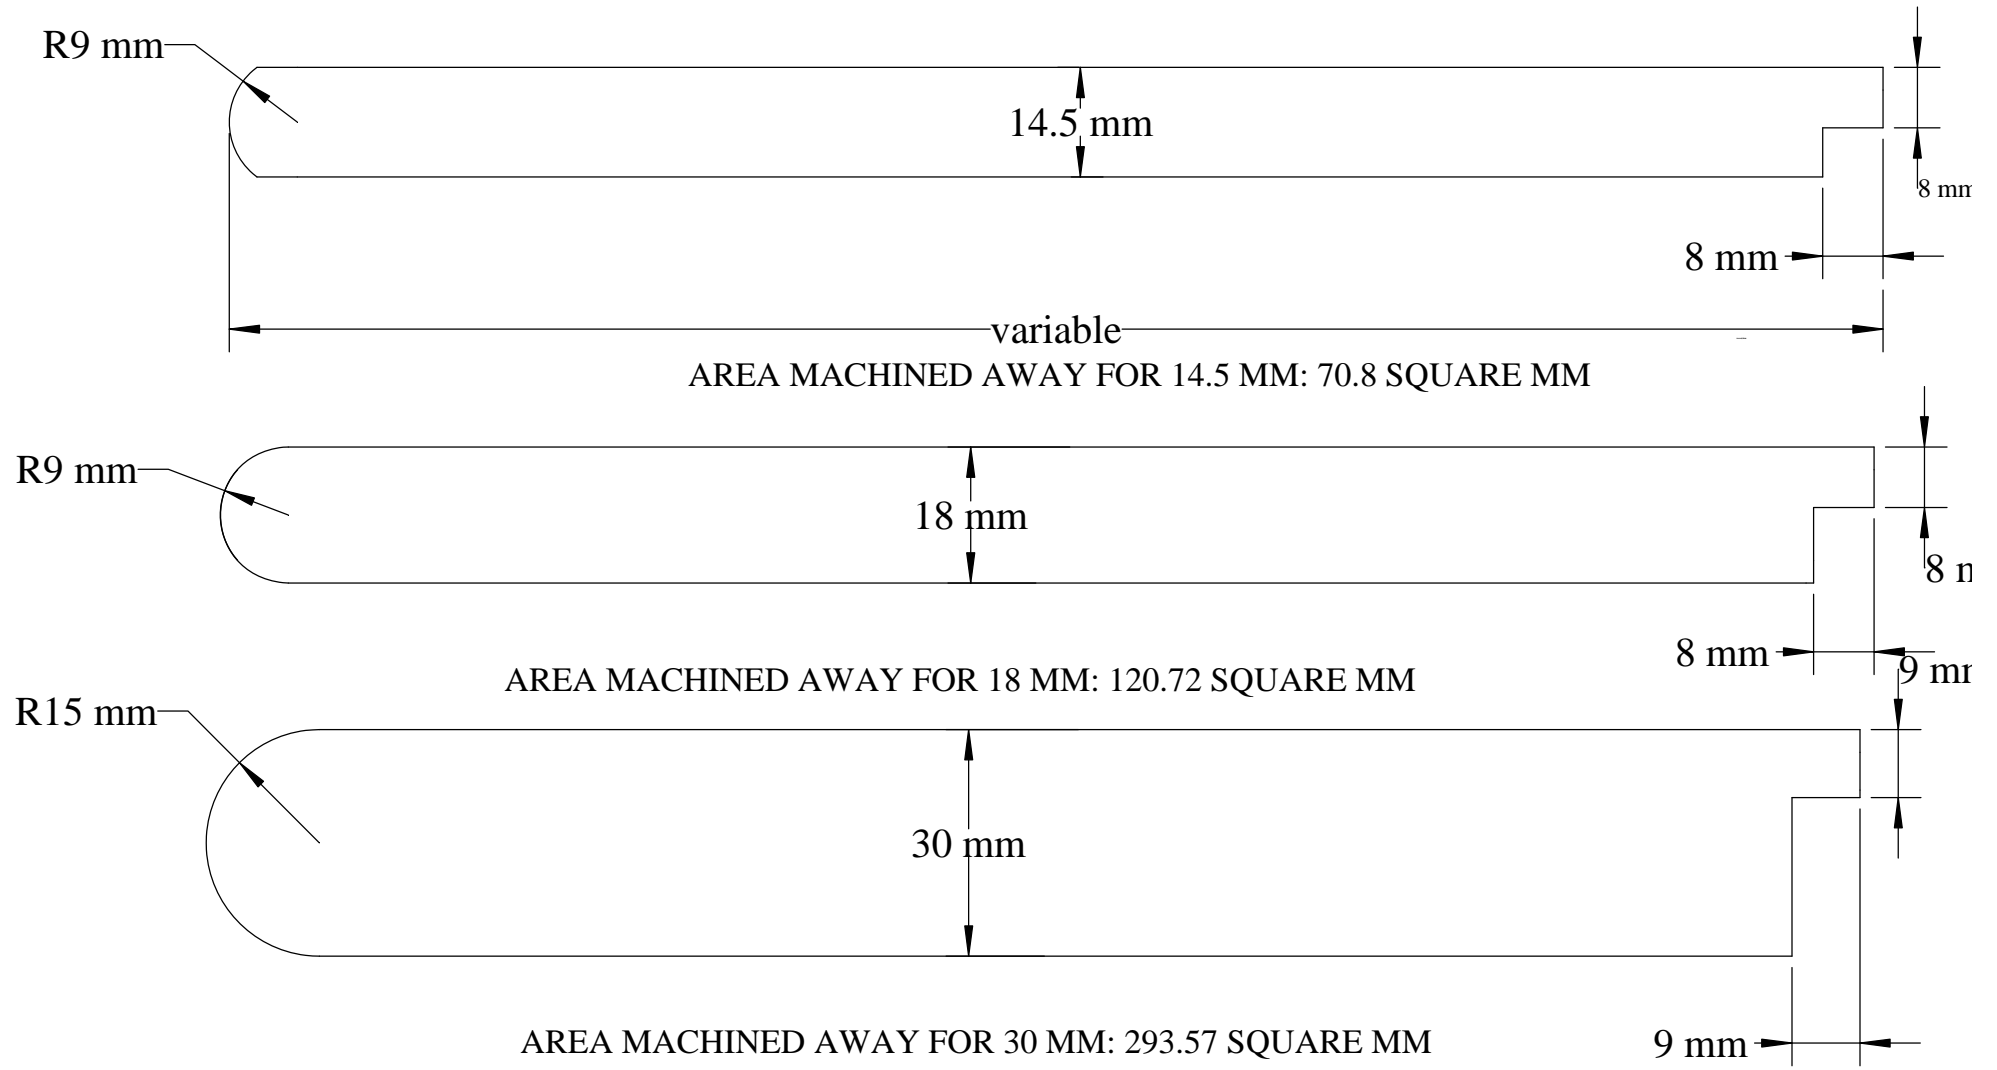

SAM MOULDINGS

Newpark Industrial Estate Greystone Road Antrim BT41 2RU
 Tel : (028) 94428288 Fax : (028) 94428244

Website: www.sammouldings.co.uk Email: info@sammouldings.co.uk

PROFILE

SAM 50

DRAWN BY

M.KIRKPATRICK

REV:

DATE

May 2001

AUTH:

SCALE

1:1

TOLERANCE
 +/- 0.1

e,

1

PRINTED COPY UNCONTROLLED

nm

n

:

ANCE
5MM