

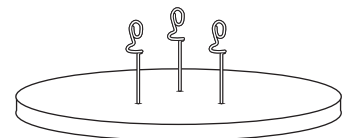


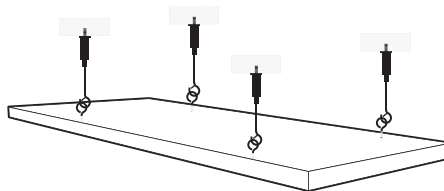


CLASS ABOVE

CIRCLES - BAFFLES - RAFTS

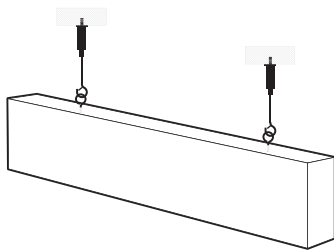

Fixing suitable for substrate

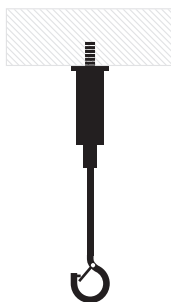

Ceiling Applications

Baffles and Rafts - Always wear clean protective gloves when installing this product to ensure the panels are kept clean.


- Lay the Panels with their back so that the fixing side is facing upwards on a clean dry surface.
- Mark the fixings positions on raft or baffle based off the diagrams shown
- Mark your ceiling points against the baffle or raft of where you want it to go.
- Using the screw eyes provided, hand screw into place where you've marked
- Using a suitable fixing for the ceiling you are suspending from, fix the suspension cable to the ceiling where you've marked.
- Lift the unit into place to meet the cables. Using the snap hook attached the cable to the screw eyes you've already fixed to the raft.
- Adjust cables to the required height and trim excess wire to suit.

Circles - Insert Class ring into holes on back of panel for suspension.




3D

WAVE - FOREST - PRISM - CUBISM - TETRIS - TECHNICS

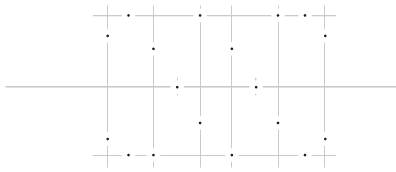


STEP 1

Plot your Soudtect installation on the wall. Work out your bracket spacing based on the number of panels in your design.

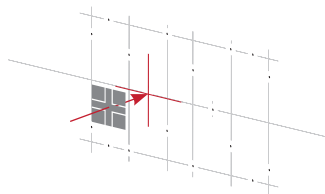


STEP 2

Find the centre of central BRACKET B and fix into place.

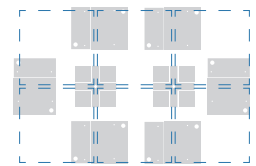


STEP 3

Continue to fit remaining brackets.

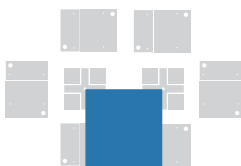


STEP 4

Simply slide the panel onto the brackets

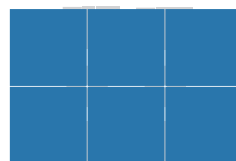


STEP 5

Continue with all the other panels to complete the installation.

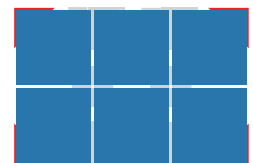

STEP 6

Once all the panels are in place. You have the option of adding in the corner brackets to hold the outer four corners in place.

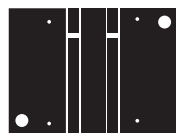

BRACKET A



BRACKET B




BRACKET C



3D

WAVE - FOREST - PRISM - CUBISM - TETRIS - TECHNICS

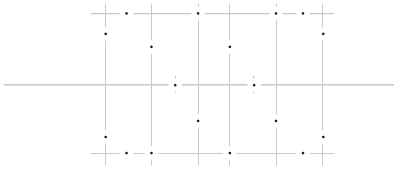


STEP 1

Plot your Soudtect installation on the wall. Work out your bracket spacing based on the number of panels in your design.



STEP 2

Find the centre of central BRACKET B and fix into place.

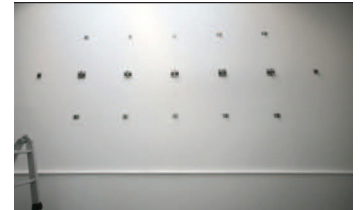


STEP 3

Fit all the A and B brackets to the wall securely to cover the entire installation.



STEP 4

Simply slide the first panel onto the brackets

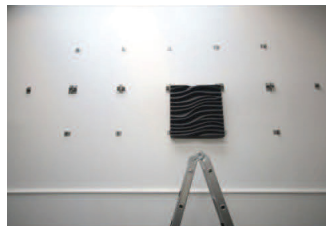

STEP 5

Continue with all the other panels to complete the installation.



STEP 6

Once all the panels are in place. You have the option of adding in the corner brackets to hold the outer four corners in place.



BRACKET A



BRACKET B



BRACKET C