


Installation Guide

Six easy steps to fitting your panels using three brackets

Step 1

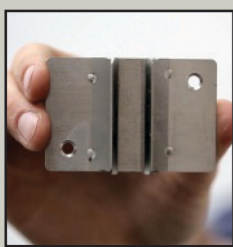

Bracket A



Bracket B



Corner Bracket


Work out the placement of the brackets by measuring the area of wall you are intending to fill and drawing a grid of where your panels need to go, depending on the number of panels you have and the design you want to achieve.

Step 2




Once drawn find out where the central B bracket needs to be by finding the centre of your installation and fix the bracket into place.

Step 3

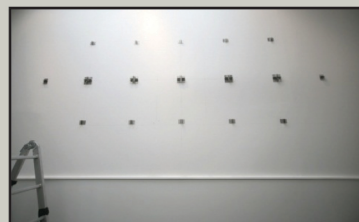


Fit all the A & B brackets onto the wall securely to cover the whole installation.

Step 4

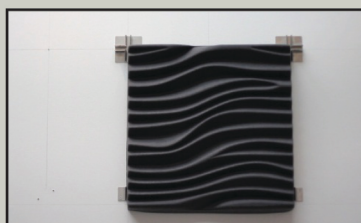

The first panel can be placed on the wall by simply sliding onto the brackets.

Step 5

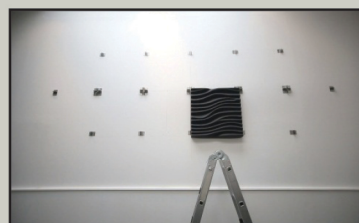

Continue with all the other panels until all the panels are fitting onto the brackets.

Step 6

Once all the panels are in place, you have the option of adding the corner brackets to hold the outer four corners of the installation in place.

Your panels are now installed!

