





3D

WAVE - FOREST - PRISM - CUBISM - TETRIS - TECHNICS

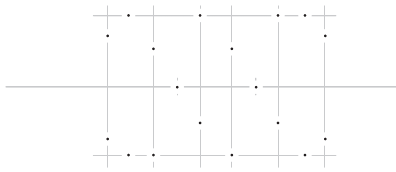


STEP 1

Plot your Soudtect installation on the wall. Work out your bracket spacing based on the number of panels in your design.

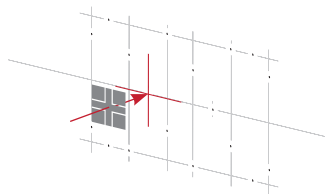


STEP 2

Find the centre of central BRACKET B and fix into place.

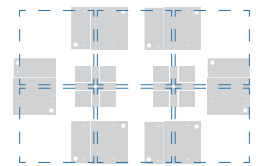


STEP 3

Continue to fit remaining brackets.

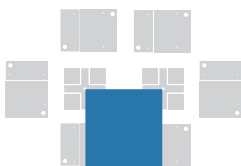

STEP 4

Simply slide the panel onto the brackets

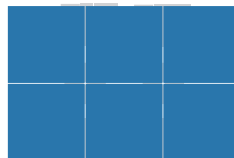


STEP 5

Continue with all the other panels to complete the installation.



STEP 6

Once all the panels are in place. You have the option of adding in the corner brackets to hold the outer four corners in place.

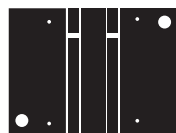

BRACKET A



BRACKET B



BRACKET C