



# Installation Guide

Six easy steps to fitting your panels using three brackets


## Step 1

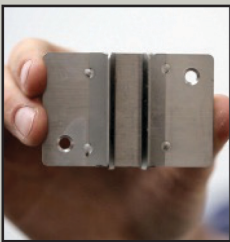

Bracket A

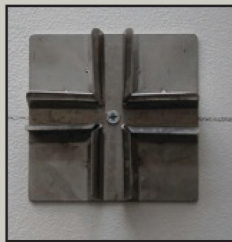

Bracket B

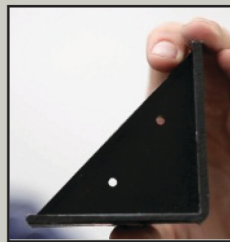

Corner Bracket


Work out the placement of the brackets by measuring the area of wall you are intending to fill and drawing a grid of where your panels need to go, depending on the number of panels you have and the design you want to achieve.

## Step 2



Once drawn find out where the central B bracket needs to be by finding the centre of your installation and fix the bracket into place.

## Step 3

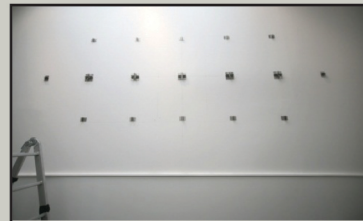


Fit all the A & B brackets onto the wall securely to cover the whole installation.

## Step 4



The first panel can be placed on the wall by simply sliding onto the brackets.

## Step 5

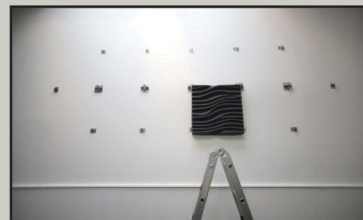

Continue with all the other panels until all the panels are fitting onto the brackets.

## Step 6

Once all the panels are in place, you have the option of adding the corner brackets to hold the outer four corners of the installation in place.

**Your panels are now installed!**

