





3D

WAVE - FOREST - PRISM - CUBISM - TETRIS - TECHNICS

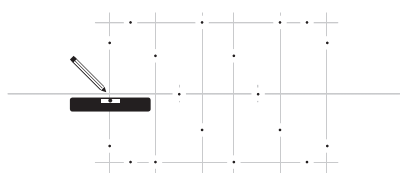


STEP 1

Plot your Soundtect installation on the wall. Work out your bracket spacing based on the number of panels in your design.

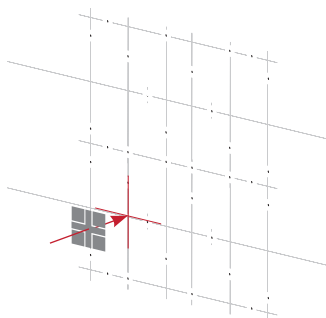


STEP 2

Find the centre of central BRACKET B and fix into place.

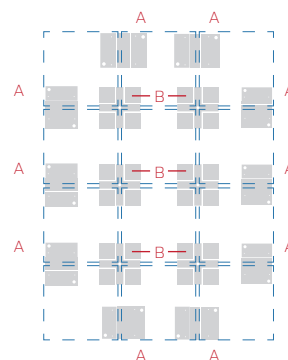


STEP 3

Continue to fit remaining brackets.

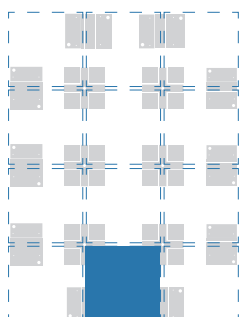


STEP 4

Simply slide the panel onto the brackets

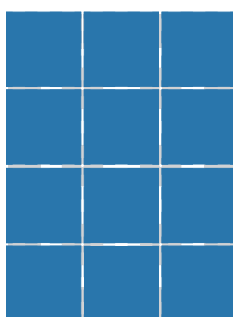

STEP 5

Continue with all the other panels to complete the installation.

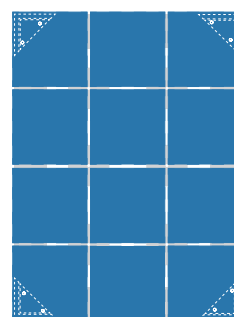

STEP 6

Once all the panels are in place. You have the option of adding in the corner brackets to hold the outer four corners in place.

When installing the corner brackets ensure they are on the inside of the panels.



BRACKET A



BRACKET B



BRACKET C