

TAP16 Meter Overbox

Fitting Instructions

Independent bracing or support may be required to take the weight of the panel.




To remove the door from the frame; Open the door & release the spring pin hinge indicated by the arrow above. Pull door towards you and lift door leaf away from fixed hinge pin.



Place the frame on top of the aperture ensuring the aperture is 5mm smaller than the panel size / back of frame opening size.



Fix the frame on top of the aperture using all the fixing holes to secure in place. Ensure frame is square by measuring diagonally & flush to the wall / ceiling. If fire, acoustic or airtight rated apply Intumescent acrylic mastic on the rear of the frame prior to surface mounting the frame

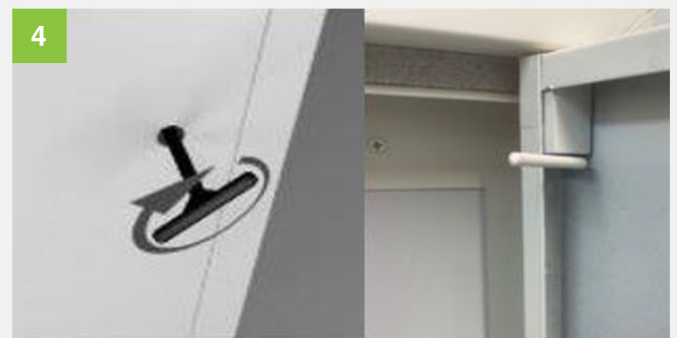

Refit the door by locating the fixed hinge pin back in place then the spring pin hinge ensuring this is fully located then close the door. Lock the door in place with key provided & ensure the door is flush when closed.