


COMMERCIAL SHOWER MODESTY SCREEN

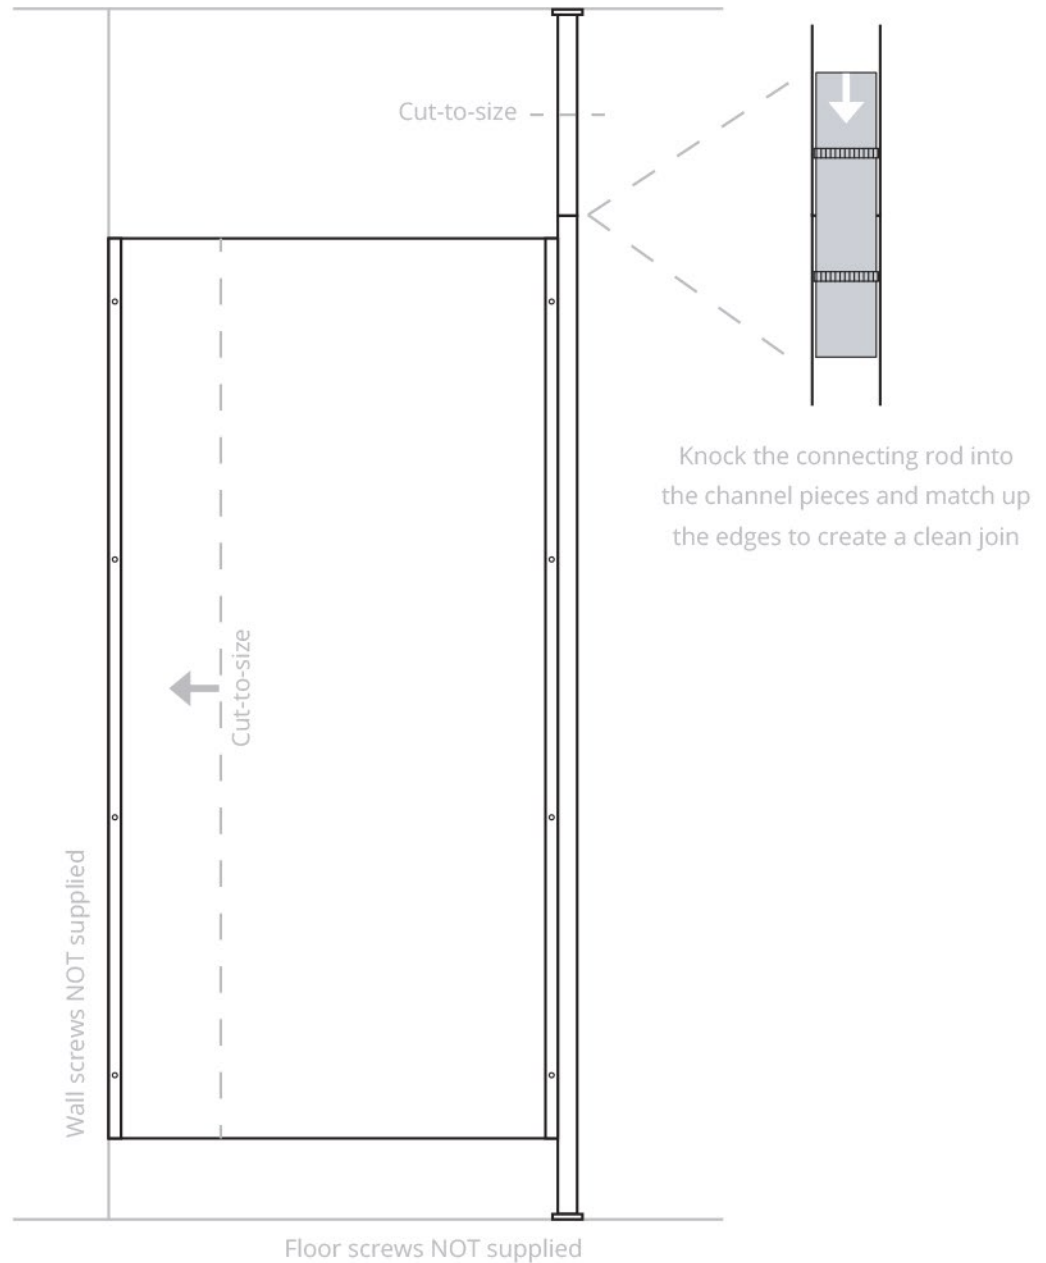

CONTENTS

Before you start, please check the pack contents:

- 1x Modesty panel, 1800 x 900mm
- 2x Full-length wall channels, 1800mm
- 1x Floor-to-ceiling column, 2000mm + 1000mm
- 1x Floor-to-ceiling column connecting rod
- 2x Floor-to-ceiling column feet
- 6x M4 screws to fix channel to column
- 8x T-nut fittings to fix panel to channels

Wall or floor screws NOT supplied

IMPORTANT

- ⚠ Wear appropriate PPE while installing and follow manual handling operation regulations.
- ⚠ Seal any cut-to-size panel edges with silicone before fixing to full-length channels.
- ⚠ To secure a channel to the column, drill 3.5mm holes in the column at equally spaced increments to allow the screws to be tapped into the metal.

