


Canopy Fixing Instructions


Flat Roof

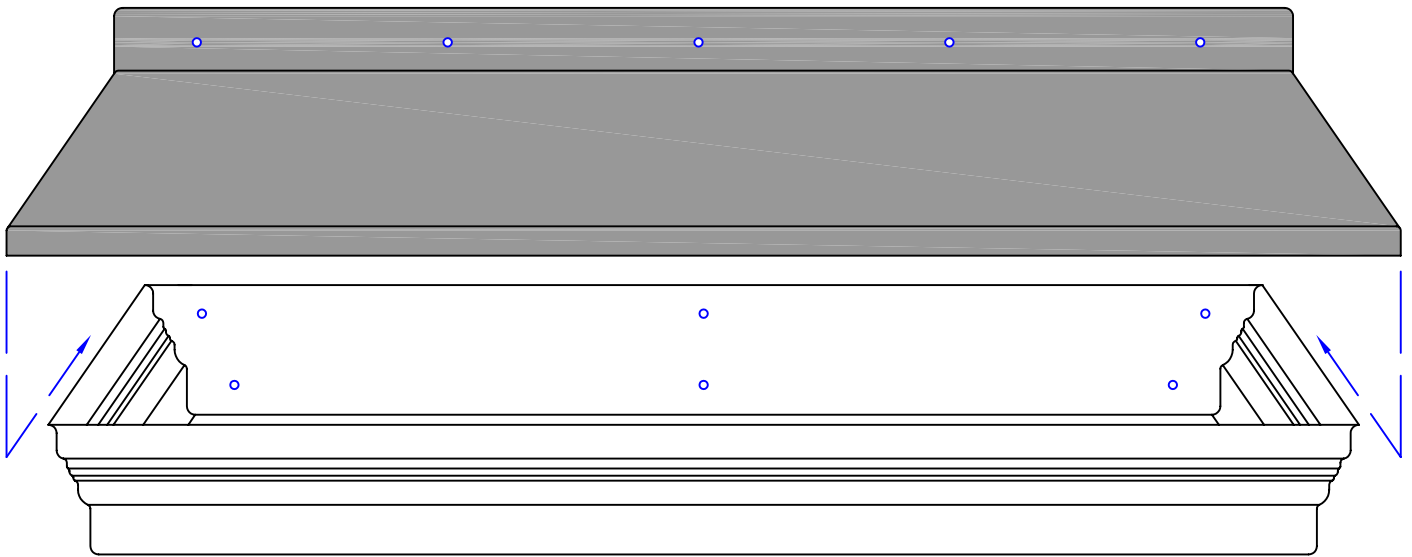

Step 1

Hold canopy base at desired height over door, centralise and mark wall through top centre hole of base.
 Drill wall where marked and insert wallplug.
 At this point you should fit corbels if required by screw fixing down through base in desired position.
 Support base whilst fixing to wall with screws and washers (not supplied).
 Fix base through remaining fixing points with screws and washers after making sure it is level, this will require shims if wall is uneven.

Typical Section

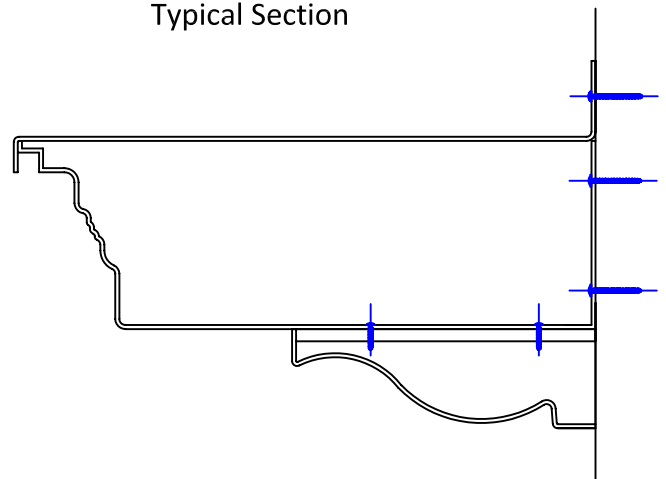

Step 2

Slide canopy roof into position after applying low modulus silicon sealer on mating surface, support and fix through vertical flashing into wall using caphead screwcovers, then seal canopy flashing to wall using suitable low modulus exterior mastic.

N.B. Whilst handling and fitting canopy use protective gloves, eye protection and dust mask to prevent injury.

Maintenance

Canopy can be cleaned using non abrasive detergent and rinsing with clean water.

YBS Composites

Unit 1 Crags Industrial Park, Morven Street, Creswell, Derbyshire, S80 4AJ

Tel: (0844) 9910404 Fax: (0844) 9910405 www.ybsinsulation.com

Project Flat Roof Door Canopy

Client YBS

Description Fixing Instructions - Flat Roof Door Canopy

Date 13/09/2011

Drawing No. 285/11

Scale N/A

Drawn Robert Quinton