



Fig.13



Fig.14

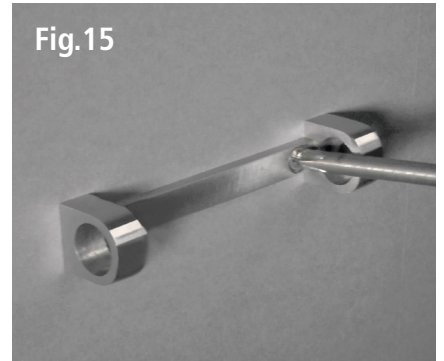


Fig.15

- **When cleaning the stainless steel toilet roll holder,** check for dirt and grease and wipe clean as directed in the 'Care of finishes' section.

weekly checks

- **If the toilet roll holder has become loose** check that the fixings are tight and that there is no movement on the bracket or fixings to the wall. If the items are loose, please tighten the relevant fixings (Fig.13).
- **To access the fixings** of the single and double toilet roll holder, remove holder by unscrewing the end cap (Fig.14) and slide holder out of the bracket. then tighten the fixings as necessary (Fig.15).

monthly checks



Satin Stainless Steel

Wipe clean with a medium strength detergent or white spirit using a soft cloth or sponge. Rinse and dry with a dry soft cloth. In the event of dirt having accumulated through neglect, application of aerosol lubricant prior to standard cleaning is recommended. A harsh brush should never be used.

Finish prefixes: SS

Polished Stainless Steel

Wipe clean with a medium strength detergent or white spirit using a soft cloth or sponge. Rinse and dry with a dry soft cloth. In the event of dirt having accumulated through neglect, application of aerosol lubricant prior to standard cleaning is recommended. A harsh brush should never be used.

Finish prefixes: PS