




Fingershield Fitting Instructions

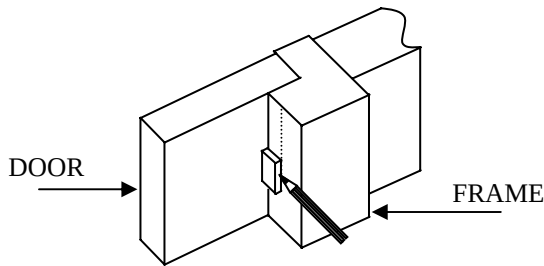


1. With the door in the closed position, use a pencil/pen to draw a guideline on the door frame using the 20mm plastic measuring block (provided).

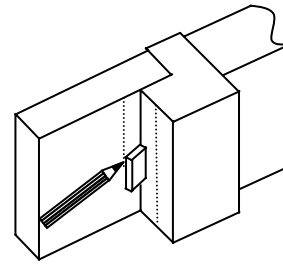


2. Simply repeat the procedure on the door to produce a second guideline.

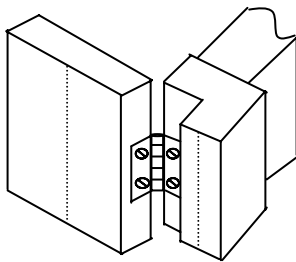


3. Now wedge the door in the fully open position.

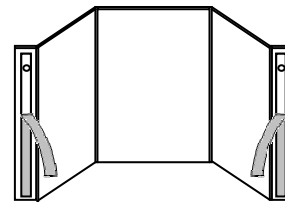

4. Remove one layer only of the double sided tape from each side of the Fingershield device.

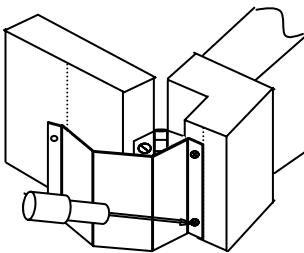

5. Line up the edge of the Fingershield parallel to the guideline/pencil line on the frame. Press firmly to hold in position before finally securing with the screws (provided). (For metal doors and kick-plates pre-drill with 2.5mm drill bit.)

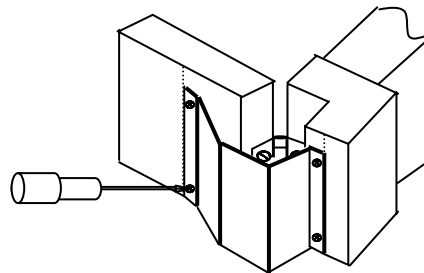

6. Repeat this procedure to attach the Fingershield device to the door itself.

FINGERSHIELD INFORMATION AND USER GUIDE

Maintenance

The only maintenance that your Fingershield device requires is an occasional wipe over with a clean damp cloth.

Important points to note

Once installed Fingershield can be removed for door maintenance by unscrewing the exposed screw fixing from the door side, therefore enabling you to gain access to the door and hinges.

Once the maintenance work has been carried out, replace the device as shown in the fitting instructions.

If in rare circumstances the door is being replaced, then simply do as above, and refit to new door as before.

In buildings where trolleys, wheelchairs and mobile stretchers are used, staff must be warned to avoid striking the Fingershield device with excessive force, as this may lead to damage.

The constant kicking or striking of the Fingershield device could cause the device to rip, tear, or be dislodged from its fixing.

FINGERSHIELD SAFETY (UK) CANNOT BE RESPONSIBLE FOR THIS TYPE OF DAMAGE HOWEVER CAUSED BY USER MISUSE. PLEASE BE ADVISED.