

Tactiles™ Connectors Installation Guide

All Interface® flooring tiles may be secured using TacTiles™.

Subfloor preparation requirements for installations using TacTiles™ are the same as those for installations where adhesives would be used.


To apply TacTiles™ follow the simple steps outlined below paying particular attention to the guide marks on each TacTile™:




Tactiles™ Placement

Insert tiles based upon the approved installation method.

TacTiles™ should be placed based on the following diagrams.

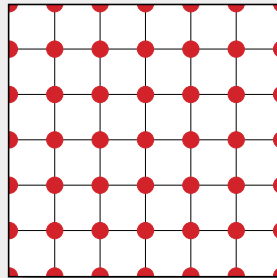

Quarter-Turn,
Monolithic and
Non Directional
installation

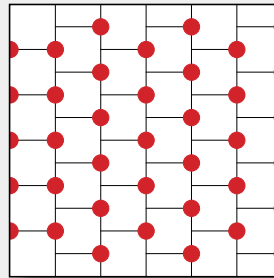

Brick and Ashlar
installation

Lay anchor rows, placing a TacTiles™ connector at every joint. Install carpet tile using a step method in all quadrants, placing a TacTiles™ connector at every joint.

Place a TacTiles™ connector at every joint around the perimeter of the room and for any cut tiles.

Lay anchor rows, placing a TacTiles™ connector at every joint. Install carpet tile in all quadrants, placing a TacTiles™ connector as illustrated in the diagram.

Place a TacTiles™ connector at every joint around the perimeter of the room and for any cut tiles.

NB: Heavy foot traffic may require the use of a higher application rate.

Interface®

Tactiles™ Connectors Installation Guide


Tactiles™ should be applied at each corner along the anchor rows and at all room perimeters. Tactiles™ must also be applied under every cut tile and any adjoining tile to the cut tile. For area rugs lay carpet tiles to create rug placing Tactiles™ at every joint. Place a connector at every joint around the perimeter of the rug. If different backing types are to be mixed ensure the Tactiles™ are compatible with the related backing. Graphlex® Tactiles™ should not come in to direct contact with GlasBac® backing. See diagrams below:

Tile Replacement


To replace a carpet module simply lift the existing carpet tile and peel it from the connector. Then fit a new carpet tile to the existing connector. PVC carpet tiles can normally be removed from a connector twice before necessitating replacement of the connector. Bitumen carpet tiles can only be removed once.

NB: Tactiles are not recommended for installation of carpet tiles on stairs, ramps, heavy rolling loads or over existing carpet surfaces. Tactiles are suitable for use over raised access panels.


Option 1

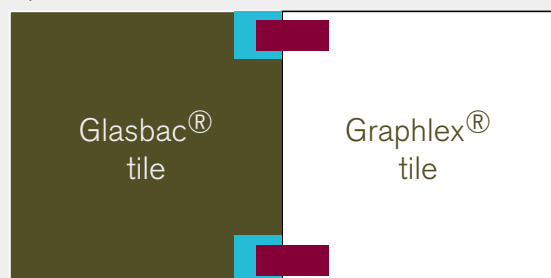

Option 2

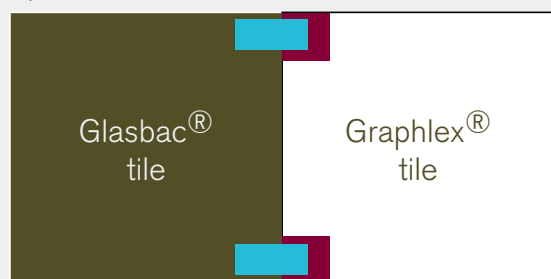

Option 3

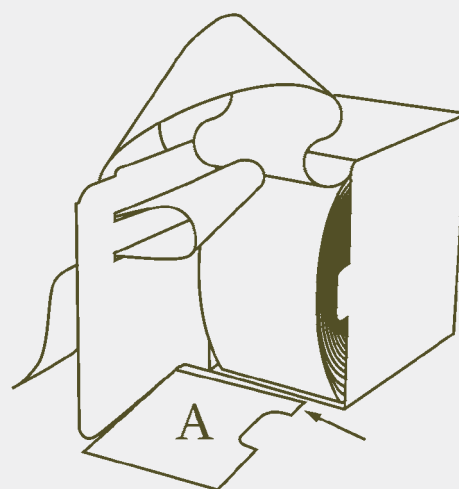

Cardboard box use as dispenser The above diagram shows the steps to adapt the box into a dispenser:

1. Remove the inner flap (A) at perforation and discard.
2. Extend 3-3.5cm (12-14") of tape liner and weave, as shown, through the carton top flap