

---

## **Contact Details**

Please note that some of the contact details on this PDF document may not be current.

Please use the following details if you need to contact us:

Telephone: 0844 879 3588

Email: [customer.services@gdcgroup.co.uk](mailto:customer.services@gdcgroup.co.uk)

The Help Centre section of this website also features a wide range of information which may be of use to you and is available 24 hours a day. It includes:

- Operating and installation instructions downloads
- Request a repair
- Where to buy our products
- Literature downloads
- Heating requirement calculator

[www.credaheating.co.uk/help-centre](http://www.credaheating.co.uk/help-centre)

**NEWera**<sup>®</sup>  
a heating revolution from Creda



---

# TSR Electric Storage Heaters

## Assembly Instruction

|                   | <b>Automatic</b> | <b>Manual</b> |
|-------------------|------------------|---------------|
| <b>Model Nos:</b> | 79331S           | 79334/6S      |
| <b>Cat. Nos:</b>  | TSR6AW           | TRS6MW        |



This product complies with the European Safety Standards EN60335-2-30 and the European Standard Electromagnetic Compatibility (EMC) EN55014, EN60555-2 and EN60555-3. These cover the essential requirements of EEC Directives 2006/95/EC and 2004/108/EC

© GDC Group Ltd. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing.  
A division of the GDC Group Ltd, Millbrook House, Grange Drive, Hedge End, Southampton SO30 2DF

---

**IMPORTANT NOTES:** It is important to read these instructions carefully and also note the information given on the heater itself. As these particular instructions refer to the assembly and installation of a new heater, they should be retained by the installer; not left behind for the user as this would invite the dismantling and servicing by unqualified persons. FOR THE USER, there is a separate instruction leaflet explaining how the heater should best be operated. Please see that this leaflet is left with the heater for the user's purposes. A MEANS FOR DISCONNECTION IN ALL POLES MUST BE INCORPORATED IN THE FIXED WIRING IN ACCORDANCE WITH THE WIRING RULES, THE INSTALLATION SHOULD BE CARRIED OUT BY A COMPETENT ELECTRICIAN. CABLE HAVING A MINIMUM 'T' RATING OF 85°C MUST BE USED. Heaters forming part of a comprehensive space heating system should be wired with their own separate circuit, if however, 1 or 2 heaters are installed as a starter system these may be connected to a 30 amp ring main provided that the instructions below are observed, any further heaters installed must be connected by its own circuit. If connected to a 30 amp ring circuit the total rating of heaters connected must not exceed 3kW, where the circuit supplies a kitchen, or 4kW, where the circuit does not include a kitchen. The storage radiator is designed to run on cheap overnight electricity, therefore the means of connecting the heater to the ring main should include a timer. These should be connected to the supply with 3 core heat resistant cable, the size of which is dependant on heater loading i.e. loading up to 10 amps use 1mm<sup>2</sup>, up to 13 amps use 1.5mm<sup>2</sup> and for the larger heaters 2.5mm<sup>2</sup> cable. If installed in a bathroom the heater must not be accessible to a person using a bath, wash basin etc., and must be controlled by a fused, double pole switch within 2 metres of the appliances. It is not recommended that a heater installed in a bathroom should be connected to a ring main circuit. WARNINGS - THIS APPLIANCE MUST BE EARTHED - SPECIAL ATTENTION MUST BE PAID TO THE SECURITY OF THE HEATER'S WALL FIXINGS. TO MAINTAIN STABILITY, IT IS ESSENTIAL THAT THE HEATER IS PLACED ON A LEVEL SURFACE AND CARE SHOULD BE TAKEN TO AVOID IRREGULAR SURFACES, SUCH AS MAY RESULT FROM CARPETS OR TILED SURROUNDS PARTIALLY PROTRUDING UNDER THE HEATER. IF, DURING ANY REASSEMBLY OF THE HEATER, A PART OF THE THERMAL INSULATION SHOWS DAMAGE OR DETERIORATION WHICH MAY IMPAIR SAFETY, IT SHOULD BE REPLACED BY AN IDENTICAL PART.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision for instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

**WALL FIXING:** The heater must ALWAYS be mounted against, and fixed to a wall as it will not stand up by itself. A detachable bracket is provided for screwing to the wall, the heater is then placed in position and fixed to the bracket by a screw at each end. The heater must never be unscrewed or moved from the wall bracket whilst it is loaded with bricks. THE HEATER IS VERY HEAVY AND WILL BE DANGEROUS IF ITS WALL FIXING BECOMES INSECURE.

#### **Solid Brick and Concrete Walls**

No. 10 Rawlplug plastic inserts.  
Drill hole of 8mm dia to a depth of 15mm greater than depth of the insert.

#### **Panelled Wall, Paramount Board, Chipboard, Plasterboard, etc.**


Check that the panel itself is adequately fixed to battens etc. Use Rawlplug M5 intersets; drill accurate 10mm dia holes in single skin plasterboard. One fixing should be in studwork.

#### **Timber Frame**

Seek specialist advice, some authorities suggest RAWLNUT

#### **Hollow concrete, Breeze Block and Thermolite Block Walls**

RAWLPLUG 'RAWLOK R6054R'. Some authorities suggest UNIFIX LB 70/10mm.  
Use Drill for accurate hole, not hammer or chisel.

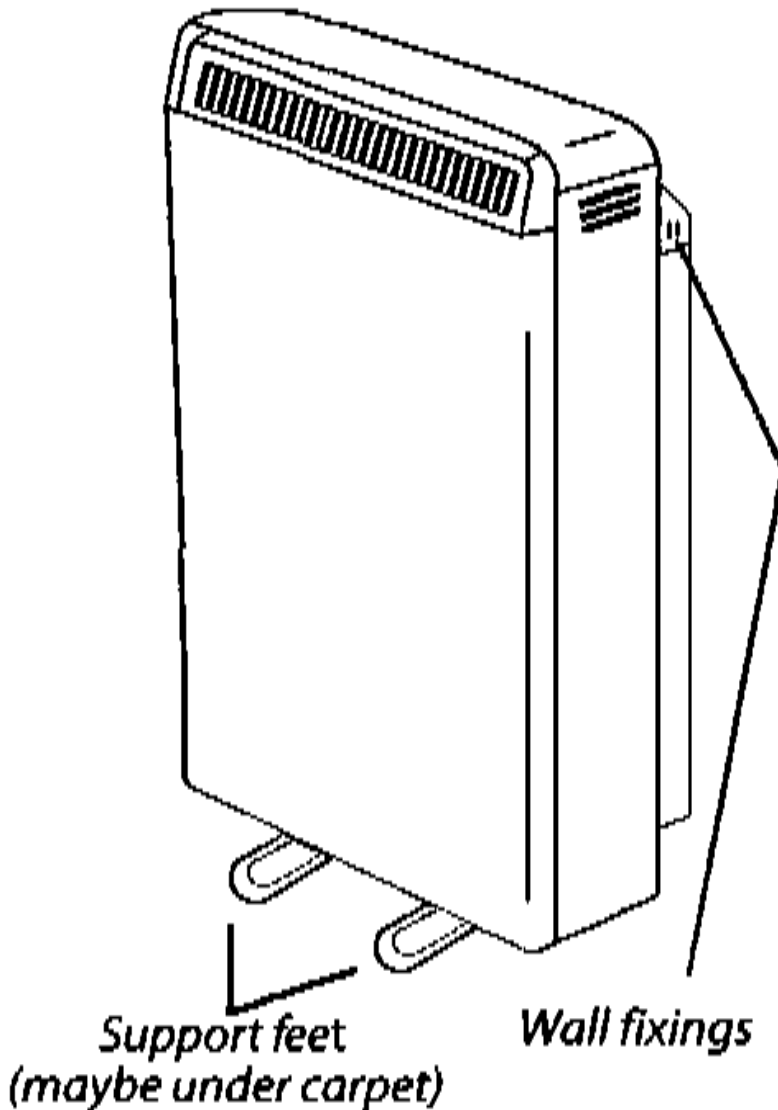

## **PLEASE DON'T TAKE CHANCES**

Site conditions may vary considerably and Creda cannot recommend the correct wall fixings to be used. It is the responsibility of the installer to ensure that adequate permanent fixing has been achieved. Purely for guidance the suggested fixings are made for certain wall materials but this list is not comprehensive or authoritative. Different wall constructions will need different inserts. Note that inserts incorporating plastic may be subject to shrinkage behind a warm storage heater and are therefore not recommended.


**Wall fixings can be obtained from local stockists.**

**CARPETS:** For safety, the heater must be positioned in the room so that there at least 75mm (3") free air space all around it; under windows, ensure that curtains, when drawn, cannot touch or cover the heater casing. In order to maintain stability, it is essential that the heater be placed on a level surface and care should be taken to avoid irregular surfaces, such as may result from carpets or tiled surrounds partially protruding under the heater. The heater feet are designed to go underneath a carpet rather than standing on it; this permits the weight to be taken on a firm base and makes for neatness and ease of cleaning with vacuum cleaners, etc. underneath the heater. Carpet gripper should be removed from behind the heater feet.

**BRICKS:** The heater casing and the heater storage bricks with which it must be fitted, are delivered in separate packages. The brick is common to all heaters, packed in pairs.


The brick catalogue number is 791402015. 7933 models have 4 bricks.

# 1

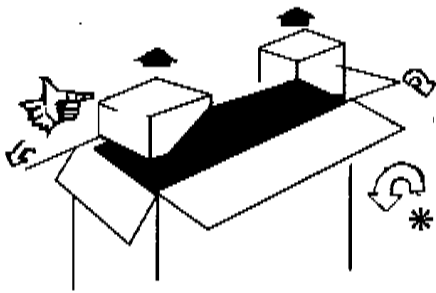

First, turn carton upside down


Open bottom flaps on carton

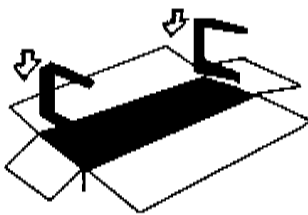

Packing corner fitments contain heater feet

It is preferable to fit the heater feet whilst the heater is still in its carton. Turn the carton upside down and open the bottom flaps. The corner fitments contain both feet and the fixing kit.


The open ends of the feet are to face forward towards the grilles in the panel. After fitting, use the feet to lift the heater from the carton.

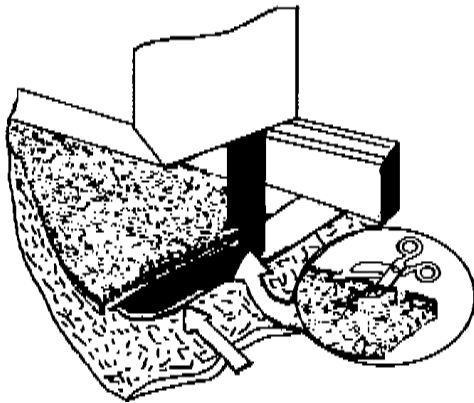

Cut underlay and remove carpet gripper to clear foot, allowing heater weight to be taken on floor proper; lay carpet over foot, slitting it as shown, it is unnecessary to cut carpet away.


## **TSR6AW MODEL ONLY -**

Attach the Room Sensor to the plastic clip which is located at the rear of the of the heater, as shown below.

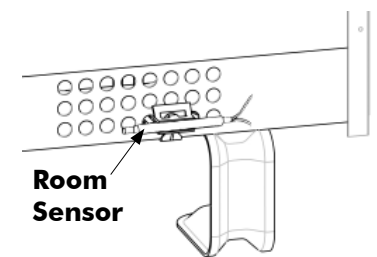


# 2

Stand the heater against the wall in its intended position. Mark the position of the two outside corners of the wall bracket. Carefully place the heater aside, and remove the wall bracket from the heater by removing the screw at each end. Reposition the bracket against the wall using the corner marks for alignment. Mark through two slots in the bracket, one at each end. Allow mortar courses between bricks to be avoided, or battens, etc. to be found for the fixing holes. Two fixing positions must be used for the 79331/4/6S.

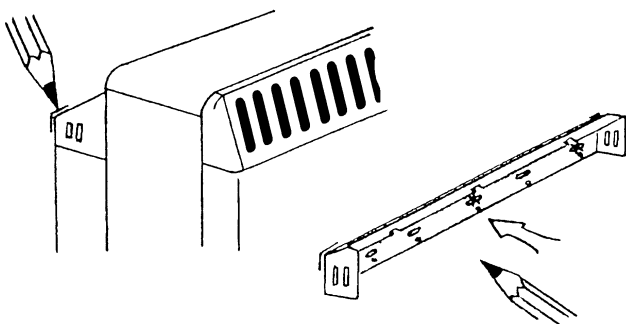

If mains connection is to be made from the left hand side, at this point the mains lead must be secured to the back of the heater using ties provided in the fixing kit.

When bracket is securely fixed, replace the heater under the bracket angle and align screw holes on heaters ends.

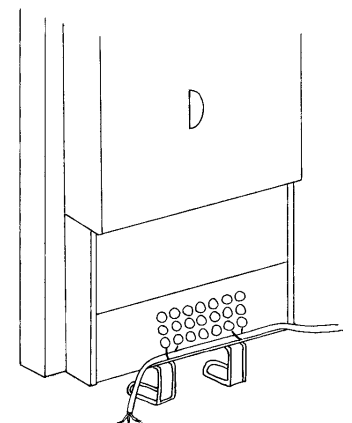

## WALL FIXINGS - VERY IMPORTANT

# 3



There are two fixing slots at each end of heater, allowing different stand-offs for different thicknesses of skirting board. Do not fully tighten these screws until the bricks are loaded into the heater as some settling of the heater may occur. **NOTE: NEVER REMOVE THESE SCREWS WITHOUT FIRST UNLOADING THE HEATER.**

See also figure 1 regarding carpets where appropriate.

Note: Max. skirting size is 15 x 120mm.



Note that the smallest wall spacing should be used only when the skirting board is of the modern slim type, or there is no skirting board at all. **THE HEATER MUST STAND VERTICAL.**

You must fit a retaining screw at each end of the heater.

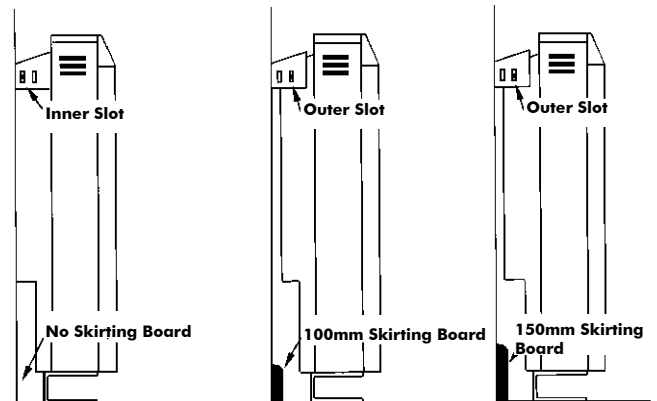

# 4


A clear space of at least 3" (75mm) must be left at either side of the heater, and any projections or shelves must be at least 10" (250mm) above the heater casing. Curtains must not be draped around or in contact with the casing. A shelf unit is separately available for fitting above heaters.

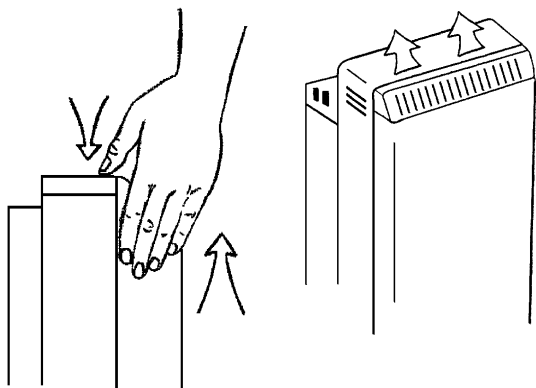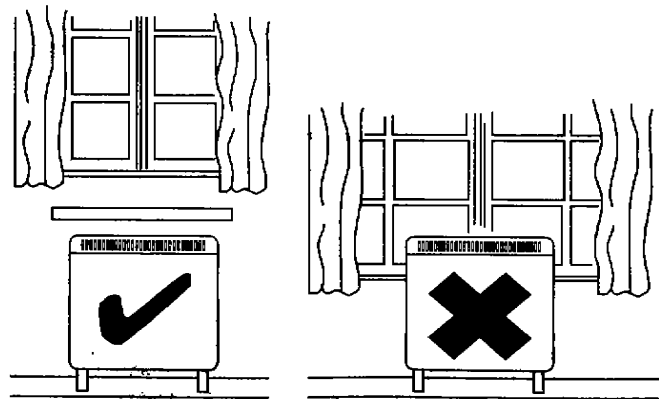

Remove the front panel/grille assembly by removing the two screws along its bottom edge. With hands positioned on either side of the panel, lift upwards to unhook the top edge whilst pressing down on the top panel with your thumbs. The panel can now be lifted clear and set to one side.

# 5

## MAINS TERMINALS

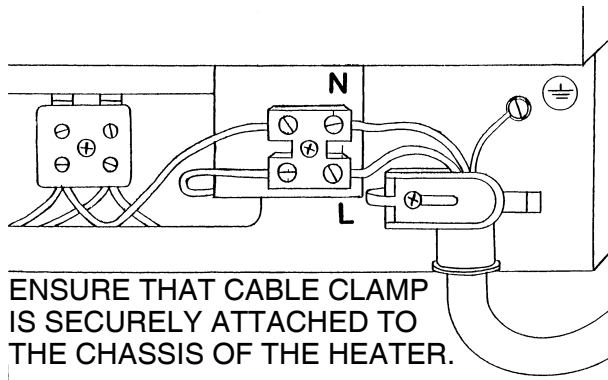


ENSURE THAT CABLE CLAMP IS SECURELY ATTACHED TO THE CHASSIS OF THE HEATER.

**IMPORTANT:** for earthing, loosen the earth screw sufficiently to wrap the mains' earth wire around it between flat washer and cup washer, and retighten the earthing screw.

Feed the mains cable through the cable clamp and make connections as marked on the heater. Pull back any slack through the clamp and tighten clamping screw. Make sure clamp is tightening on outer sheath of cable and not on individual conductors.

## CONNECTING THE MAIN'S SUPPLY CABLE

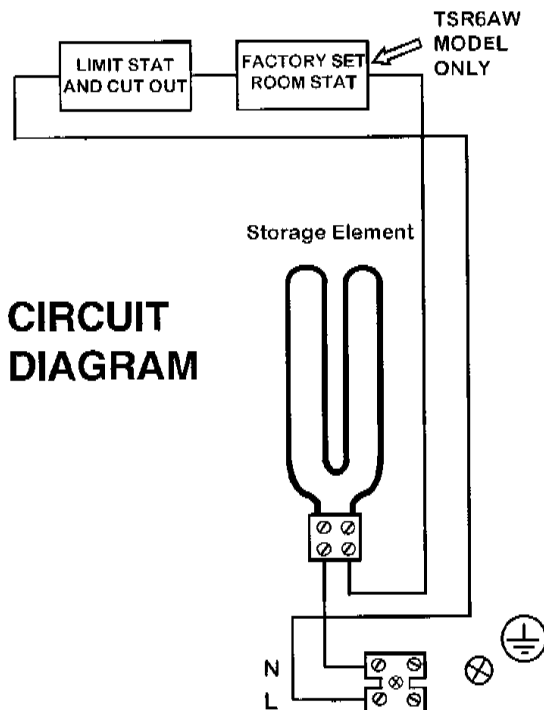

**CIRCUIT DIAGRAM**

| Charge Period | Rated Charge |       |
|---------------|--------------|-------|
| 79331/4/6S    | 7 hours      | 6 kWh |

79331/4/6S      7 hours      6 kWh


Some heater variants may have other charge periods or acceptances. See heater rating plate.

# 7

## WARNING

Remove the inner front panel; this carries on its inner face the front insulation slab. Handle this with care, the insulation must not be damaged.



REMOVE ALL THE PACKING CARDBOARD FROM INSIDE THE STORAGE BRICK COMPARTMENT, IF LEFT INSIDE IT WILL BE SET ON FIRE WHEN THE HEATER IS SWITCHED ON. ENSURE THAT ALL PACKAGING MATERIAL IS REMOVED FROM THE BRICKS BEFORE FITTING THEM.

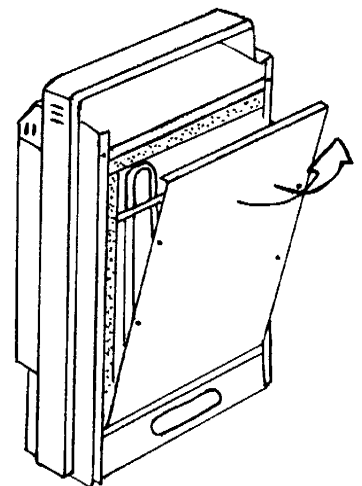

# 8

## Temporarily remove the element to allow access for the rear rank of bricks.


Loosen the terminals on the element and remove this to allow installation of rear rank of storage bricks.

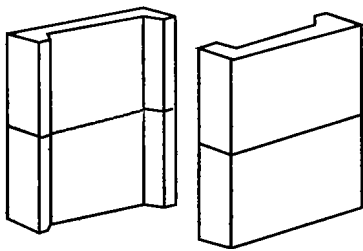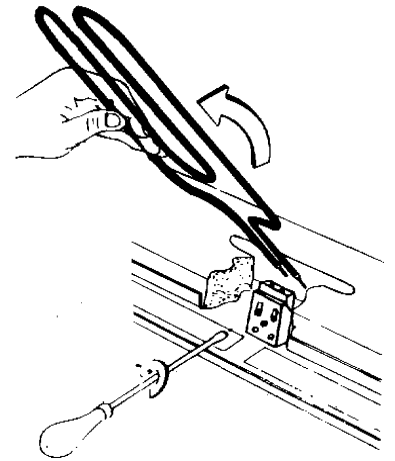

Note the way the bricks are positioned in the heater. Otherwise, they will not fit.


# 9

# 10

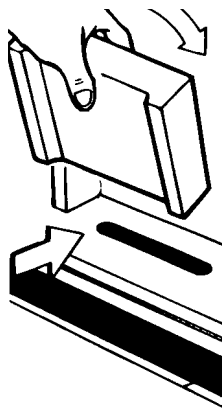

Put in place the rear rank of bricks, pushing them well back against the rear insulation. Replace the element, making sure that the connection is tight.

Now, place in position the front rank of bricks, again pushing them back to make room for the front insulation slab which is attached to the front panel.

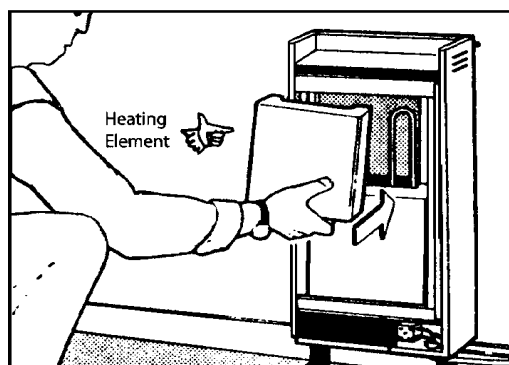

# 11

# 12


Check that the front insulation slab is properly attached to the inner front panel and refit panel (insulation innermost) to the heater by locating its bottom edge behind the front lip of the chassis, and inserting retaining screws along the top and both sides. With the bricks pushed well back, as mentioned earlier, and the insulation properly aligned, there should be no bulging of this panel and no

undue force necessary to fix it.

Replace the outer front panel / grille assembly by hooking the grille into its retaining slot on the top panel and lowering it into position. Secure the front panel with the two screws removed in Step 5. **ENSURE WALL BRACKET SCREWS ARE TIGHTENED FULLY.**

**WARNING.** When a new heater is run up to temperature, the materials will produce a slight smell for the first few days, these are normally harmless in a well ventilated room. Caged birds, young children and people with chest ailments are best kept out of the room for this first period.

**WET BRICKS:** If accidentally, the bricks have become wet due to their having been left out-of-doors, some moisture may be driven off during the first overnight charging and this may drip on to the floor. If there is any doubt on this score, advise the customer to lay newspaper beneath the heater to protect carpets etc.

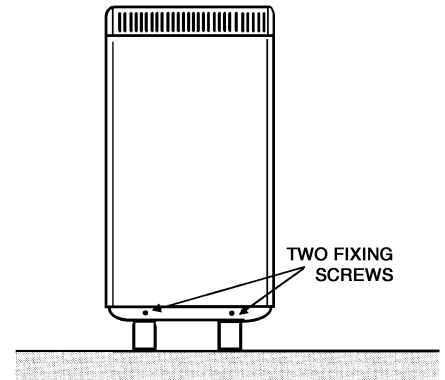

## HEATER OPERATION

The TSR6MW and TSR6AW Storage Heaters store heat overnight using cheap off peak electricity and discharge this heat the following day. The TSR6MW is preset at the factory to always take a full charge. The TSR6AW models are fitted with an external sensor which measures room temperature and adjusts the input to the heater automatically, thus ensuring the most effective use of electricity. These operating instructions assume that the correct size of storage heaters have been selected to cater for the heating requirements of the room.

# 13

**Instructions on this are given in the Users Guide which we ask you to ensure is left with the User.**


## IMPORTANT NOTICE TO INSTALLER TSR 7931S MODEL

To ensure that the correct charge level is achieved by the heater, the flat surface of the charge control thermostat spindle **MUST** be positioned towards the rear of the heater and parallel with the wall. (This should have been factory set.)

## THERMAL OVERLOAD PROTECTION

This appliance is protected by a thermal safety cutout which will operate to isolate the electricity supply if, for example, the heater surfaces or grille are obstructed to cause overheating. The cutout should not operate if the instructions given in this leaflet and clearances regarding positioning are strictly followed.

### THERMOSTAT AND THERMAL CUTOUT

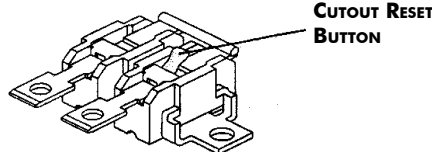

**However if the cutout has operated, determine the cause of the cutout operating. If the heater has not obviously or inadvertently been misused - e.g. covered - it will be necessary to have the appliance fully checked by a Creda Service Agent**